



Atwood Mobile Products

1120 North Main Street • Elkhart, IN 46514-3203

PHONE: 574•262•2655 **FAX:** 574•266•5410

INTERNET: <http://www.atwoodmobile.com>

January 2006

INTRODUCTION

The 2006 edition of the Atwood Range Service Manual is a resource created to help service technicians identify Atwood product by serial number, diagnose service problems and efficiently and effectively process warranty claims.

Several changes to Atwood product offerings occurred in 2002/2003.

- The RV series manifold was changed from a 'square tube' manifold to a 'round tube' manifold.
- The Atwood series (RA) had several components revised including: the manifold, burner valves, burner tubes and stovetop.
- For 2003 the Drop-Ins were completely redesigned with a more residential look.

Each of the manuals within this series offers a general overview of the product as well as more specific product information. For each product within the manual, you will find model identification, recommended tools and equipment, a sequence of operation, warnings, annual maintenance procedures, parts and troubleshooting guides, warranty procedures, flat rate schedules, and replacement part reference charts.

Due to the rapidly changing personal computer revolution we have placed troubleshooting information in a variety of places to make sure that the most accurate information is available. The best place to find the current information about Atwood products is our website: www.atwoodmobile.com. At our website brochures may be downloaded, trouble shooting guides reviewed and the latest information bulletins can be read. In addition all Atwood Authorized Service Centers are listed on our site, accessible via an easy-to-use search system.

Service for all Atwood products is handled out of our Rockford location. Should you have any questions regarding our products or the information contained in this manual simply dial 1-866-869-3118. **Be sure to have the Model and Serial Number when you call.**

Atwood Service Department

TABLE OF CONTENTS

Atwood & Wedgewood Ranges, Slide-In's, and Drop-In's


Atwood Letter	1
Questions	3
Model Identification	4-5
Range & Oven Gas Components	
Robertshaw / Harper Wyman	6
Combination - Harper Wyman/Robertshaw / Harper Wyman	7
Regulators	8
Sequence of Operation	9
Common Top Burner Problems / Oven Burner & Pilot Problems	10
Trouble Shooting Guide	11-12
Identification of Older Wedgewood Systems	13
Cooking Appliance Terminology	14
Flat Rate Schedule	15
Return Goods Policy (RETURN ADDRESS)	16
Warranty	17
Warranty Procedures	17
Replacement Part Reference	
RA-1731, RA-1730, RA-2131, RA 2130, CA-30	18-19
RV-1732 & 1731, RV-2132 & 2131, CV-32, CV-30	20-21
RW-1731 & 1730, RW-2131 & 2130, CW-30	22-23
Cut out and Wiring Diagrams	24-25
C-37 & 38, R-1737, R-1738, R-1746, R-2137, R-2138, R-2146	26-27
R-1730, R-1735, R-1736, R-2136, R-2140, R-2145, C-30, C-35, C-36, C-40, C-45	28-30
DV20, DV30	31
D-21 & 26, D-26SV, D-26SG, D-31 & 36, DA-20, DA-21, DA-30, DA-31, DA-31PE, DAS-20 & 20E, DAS-30, DAS-32E	32-35

Atwood Training Tapes and Manuals ORDER BLANK


After reviewing this manual, you should be able to answer the following questions:

- Are the Harper Wyman and Robertshaw valves, burners and manifolds interchangeable?
- Can a Wedgewood range/oven be converted from LP to natural gas?
- What is the difference between the standby pilot and heater pilot?
- What are the three functions of the oven thermostat?
- What is the function of the oven safety valve?
- What is the difference between High BTU and High Pressure?
- How do you adjust the flame on the top burner and what should the flame look like after that adjustment?
- What is the temperature tolerance range on the oven thermostat?
- What is recommended to clean the oven with?
- How long is it recommended to preheat the oven before placing food in it?
- How many inches should the edge of a pan be from any oven surface?
- After the thermostat is turned to the desired temperature, approximately how long should it take for the oven burner to come on?
- Will the oven burner cycle 'on' and 'off' in the broil mode?
- Can piezo ignition be added to a match lit range?


Regulators

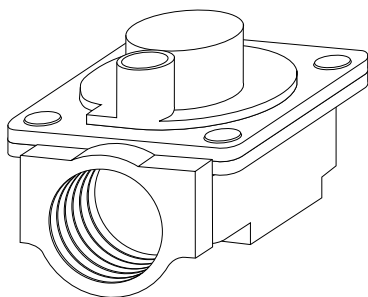

SCP

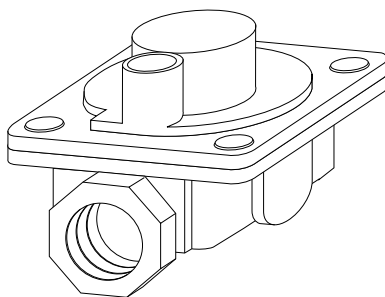


Maxitrol

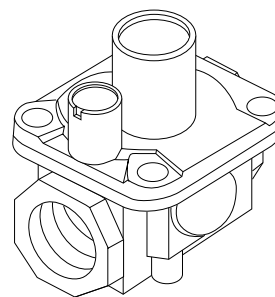

Harper Wyman

Standard Pressure Regulator

- Used on all of our standard drop-ins, cooktops and ranges
- Regulate pressure at 10" W.C.

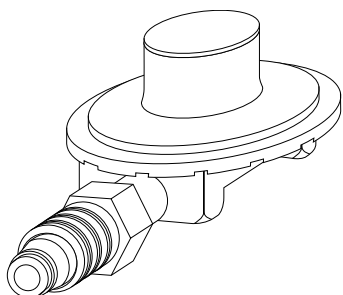

High Pressure Regulator


- Product Serial # begins with HP.
- Pressure is 16 psi
- Special cooking appliances designated for outdoor use only

Model Number Identification

NARROW DOOR - OLD WEDGEWOOD -

Range, Cooktop & Slide-In


R 17 3 6 - A B P

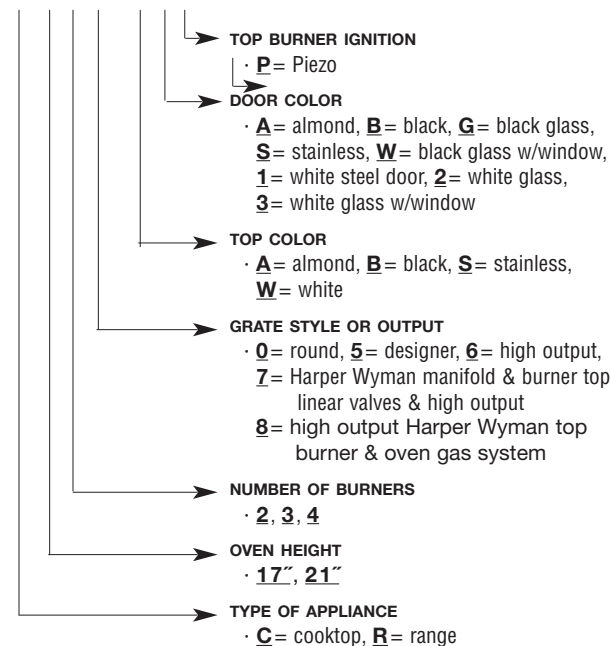

WIDE DOOR - OLD WEDGEWOOD -

Range, Cooktop and Slide-In


RW 21 3 0 - A B P

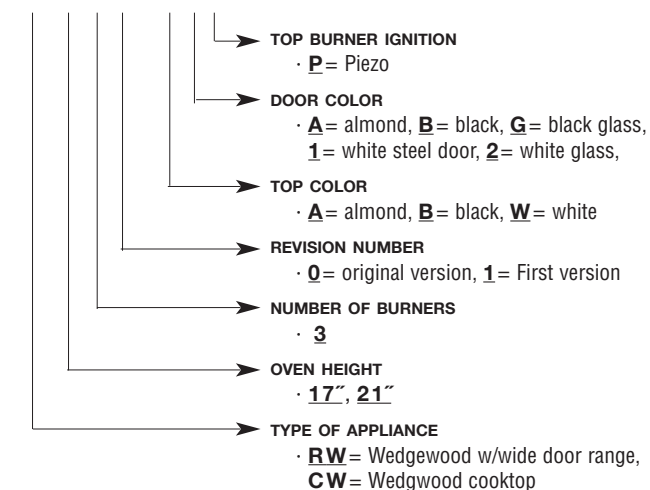

OLD WEDGEWOOD -

Drop-In Cooktop


D- 2 5 HP

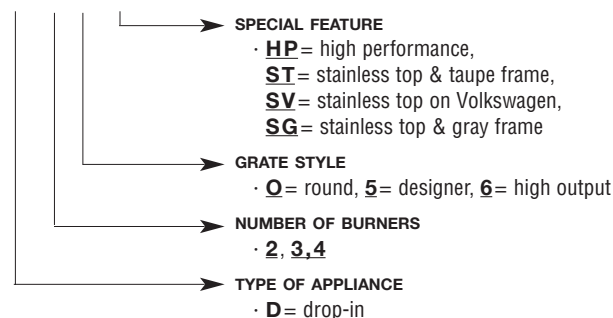

OLD ATWOOD (DA) CURRENT ATWOOD (DV)-


Drop-In Cooktop with Open Burners

DA - 2 0 B S E

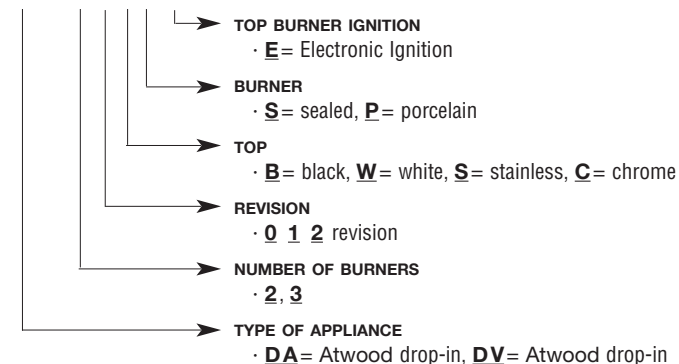


WEDGEWOOD VISION - Range, Cooktop & Slide-In

RV 21 3 1 - B B P X N R UPS

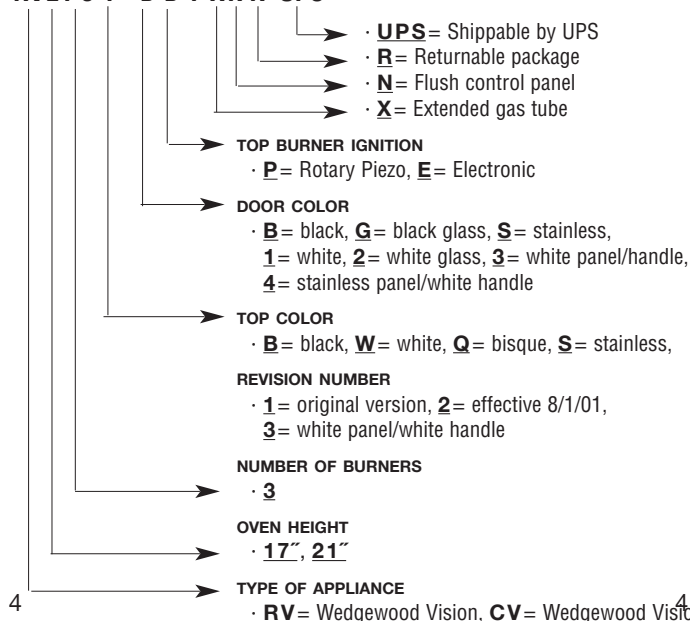


ATWOOD - Range (Oven & Cooktop w/Sealed Burners) & Slide In

RA 21 3 0 - B B E

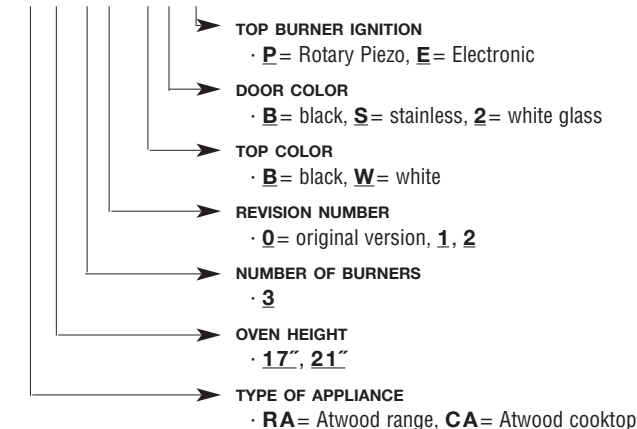


Range & Oven Gas Components


Robertshaw

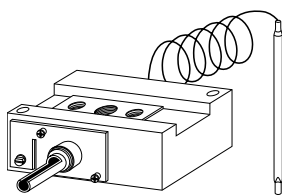

Oven Control /
Thermostat

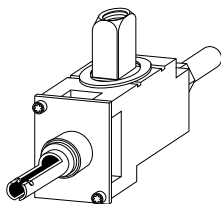


Burner Valve

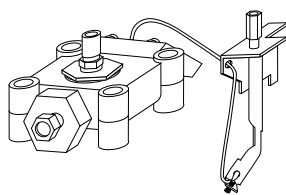


Safety Pilot Valve

- The top burner components mounted on a silver square manifold.
- Ranges in the serial number sequence WT30000 through W840000 used either this system or the Harper Wyman System.
- On a Robertshaw system the following exists:
 - a. the face of the oven control says R.C.C. (Robertshaw Control Company)
 - b. the lowest temperature on oven knob is 170°
 - c. the face plate of oven control and burner valves have silver torx head screws.


Harper Wyman

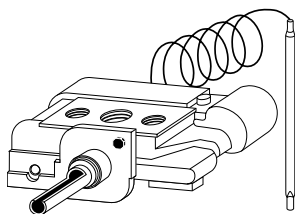

Oven Control /
Thermostat

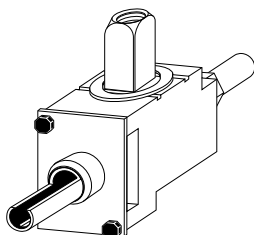


Maxi Burner Valve

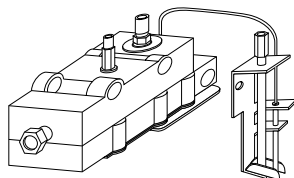


Safety Pilot Valve

- The top burner components mounted on a silver square manifold.
- Ranges in the serial number sequence WT30000 through W840000 used either this system or the Robertshaw System.
- On a Harper Wyman the following pertains:
 - a. the face of the oven control says H.W. (Harper Wyman)
 - b. the lowest temperature on oven knob is 140°
 - c. the face plate screws on the burner and oven valves are black and have octagonal heads.


Combination - Harper Wyman/Robertshaw

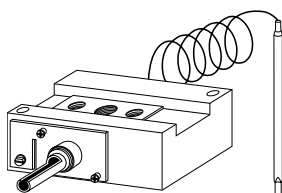

Robertshaw Oven
Control / Thermostat

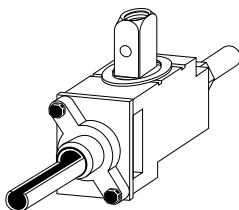


Harper Wyman Mini
Burner Valve

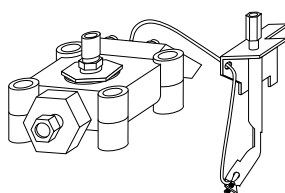


Robertshaw Safety
Pilot Valve

- Products whose model number is R or C ___7-___ have combined system (R2137-ABP).
- Top burner system is Harper Wyman
- Lowest temperature on oven knob is 170°
- Oven control system is Robertshaw


Harper Wyman

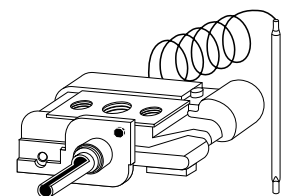

Harper Wyman Oven
Control / Thermostat

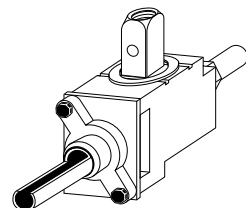

Harper Wyman Mini
Burner Valve

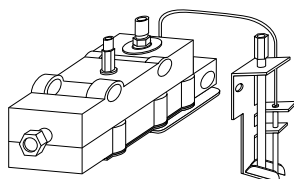


Safety Pilot Valve

- Range/Ovens whose model number is R ___8-___ to current model have a complete Harper Wyman oven and range valve system
- Cooktops whose model number is C ___8-___ to current model have a complete Harper Wyman range valve system
- Top burners are Harper Wyman and linear.
- Lowest temperature on oven knob is 170°
- Oven control and safety pilot valve are also Harper Wyman.

Copreci

- Mercury free.

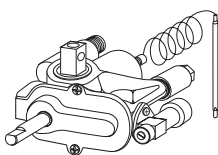

Copreci Oven
Thermostat

Sequence of Operation

Standard Pressure Regulator - this valve receives up to 13" W.C. pressure gas from LP bottles, and reduces it to 10" W.C. for the manifold.



Manifold - a continually pressurized pipe distributing gas to top burner valves and oven valve.



Oven Thermostat - supplies gas to the oven pilot, the safety pilot valve, and regulates the oven temperature.



PILOT ASSEMBLY

Standby Pilot - with the oven knob placed in the pilot position, the oven valve will supply gas to the pilot assembly. This standby pilot will stay lit until the oven knob is turned to the OFF position. It also supplies the gas for the heater pilot.



Heater Pilot - on initial start-up, when the oven thermostat knob is turned to the desired temperature, the volume of gas increases from the thermostat and the smaller standby pilot increases to a larger heater pilot flame. This higher pilot flame heats the thermocouple thereby opening the safety pilot valve to allow gas to flow to the oven burner. The heater pilot thereafter only comes on when the thermostat calls for heat.



Safety Pilot Valve - controls the gas flow to the oven burner. The valve is operated by a thermal bulb located over the heater pilot. When this bulb is heated, it opens the safety pilot valve which then supplies gas to the oven burner.




Oven Thermostat - senses oven temperature by means of a thermal bulb located in the top of the oven. The oven control knob is set to the desired temperature calling for heat, the fluid expands in this bulb, opens a seat in the thermostat and supplies gas to the safety pilot for the higher heater pilot. This heater pilot initiates the process for starting the oven burner as described above. When the oven temperature is satisfied, the fluid in this bulb decreases which closes a seat in the oven valve and throttles the pilot size down to the standby pilot mode thereby shutting the oven burner OFF. This cycle will continue until the range is turned off.

Component Identification


The temperature tolerance of the thermostat is $\pm 25^{\circ}\text{F}$.

The oven burner will come on approximately 1-1/2 minutes from a cold start and 10 seconds from a hot start.

The oven burner may cycle during the broil mode.

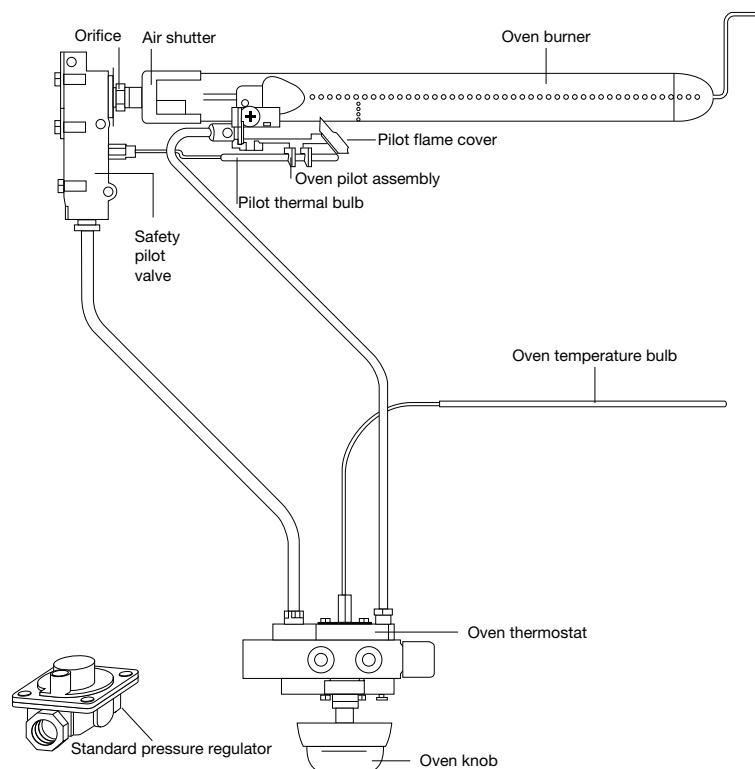

Common Top Burner Problems

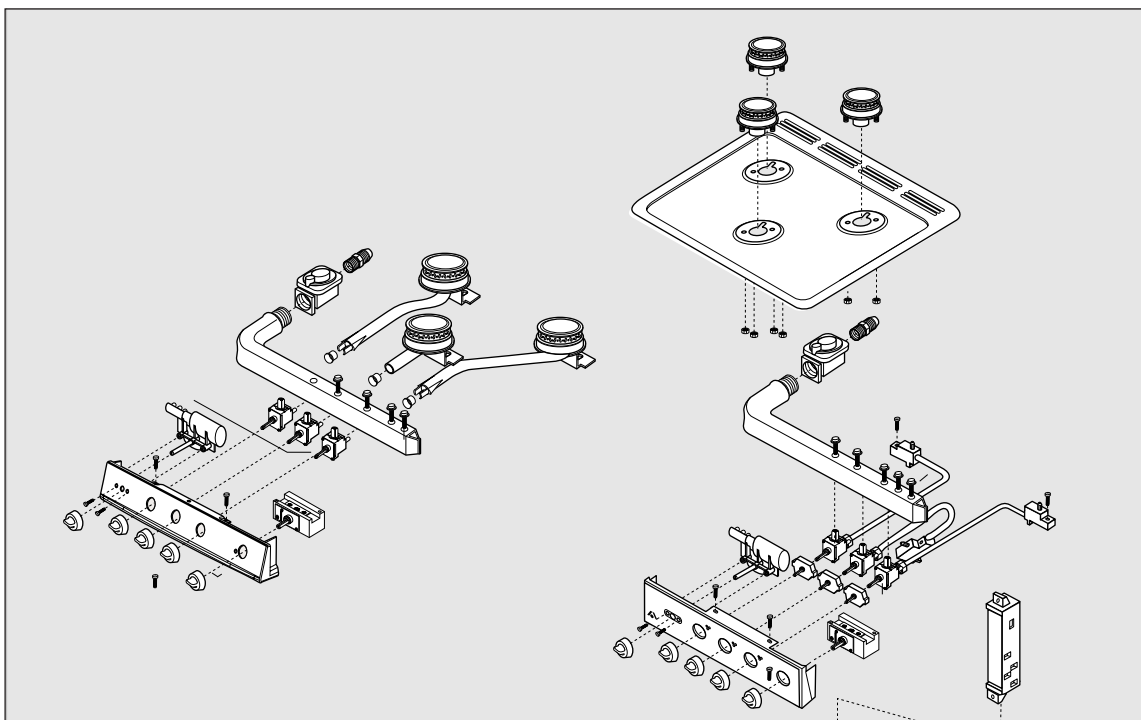


- burners won't light or stay lit
- top burner lights, but flame too small
- piezo doesn't ignite burner
- burner flame lifts off burner

Refer to Trouble-shooting Guide for causes and solutions.

Oven Burner and Pilot Problems

Refer to Trouble-shooting Guide for causes and solutions.

- oven pilot outage
- small oven flame heating slowly
- oven pilot will not go to high flame
- oven flame lifts off burner, cycling too frequently
- oven burner will not come on with high pilot

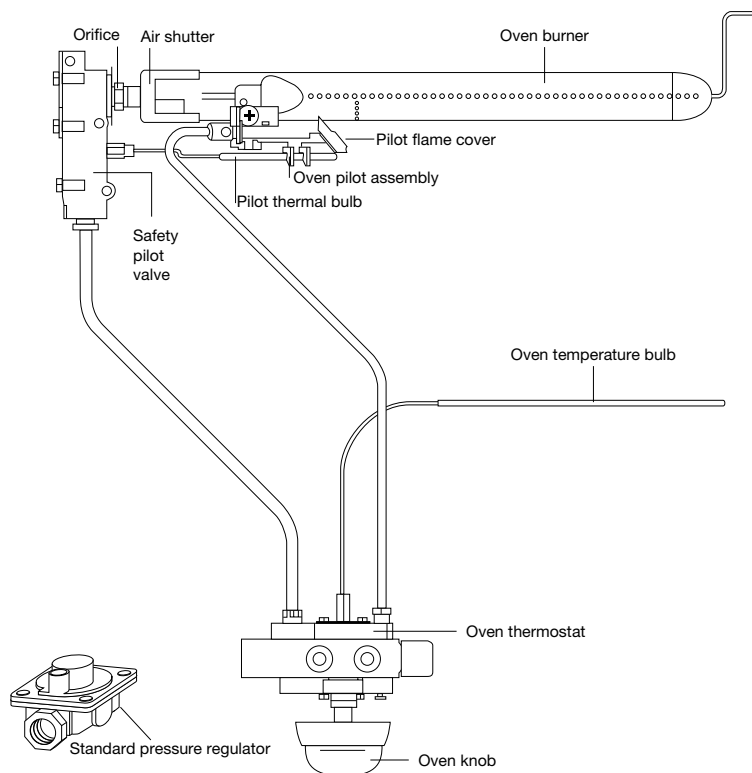

Cooking Appliance

TROUBLE SHOOTING GUIDE

Effective: 8/27/01

Guides are only intended for use on Atwood® products by service technicians who have successfully completed Atwood® training. This guide should be used in conjunction with the appropriate Instruction Manual provided with the product and any applicable Industry Standards. This is not intended to be a complete list. Please direct questions concerning service of Atwood® products to 800-825-4328 before proceeding.

CAUSE	SOLUTION
RANGE PILOT WON'T LIGHT OR STAY LIT	
Insufficient gas pressure	1. Check for gas leaks and have regulator checked by qualified LP gas technician 2. Check gas supply 3. Set pressure to 11" W.C. with two or more gas appliances running
Supply valve closed	Turn valve on
Blocked pilot orifice, or blocked flash tubes	Clean pilot orifice with toothpick; clean flash tubes
Pilot flame cover out of position,	Reposition pilot flame cover, and/or remove carbon and/or coated with carbon build up.
BURNER(S) WON'T LIGHT OR STAY LIT	
Insufficient gas pressure	Check for gas leaks, have regulator checked by qualified LP gas technician
Incorrect air/gas mixture	Adjust air shutter if applicable
Blocked orifice	Clean with toothpick
BURNER LIGHTS, BUT FLAME IS TOO SMALL	
Improper gas pressure	Check for gas leaks, have regulator checked by qualified LP gas technician
Improper air/gas mixture	Adjust air shutter if applicable
Problem burner valve	Replace burner valve
Blocked orifice	Clean with toothpick
BURNER FLAME LIFTS OFF BURNER HEAD	
Gas pressure too high	Have regulator check by a qualified LP gas technician
OVEN BURNER LIGHTS, BUT FLAME REMAINS VERY SMALL AND OVEN HEATS VERY SLOWLY	
Improper gas pressure	Check for gas leaks, have regulator checked by qualified LP gas technician
Blocked orifice	Clean with alcohol and cotton swab
OVEN BURNER FLAME LIFTS OFF BURNER AND OVEN CYCLES TOO FREQUENTLY	
Gas pressure too high	Have regulator checked by qualified LP gas technician, or improper gas mixture
OVEN COOKS UNEVENLY AND/OR FOOD BURNS ON THE BOTTOM	
Poor oven ventilation	Oven too full for proper circulation - must have 1" clearance in all directions. Ventilation holes in oven bottom (shelf above burner) are covered. Check the top vent (on back of range) it must be clear of all insulation, etc.
Problem thermostat	Replace thermostat.
Oven not preheated	Oven must be preheated at least 10 minutes.
Thermo bulb out of position	Thermobulb must be in clip on back of oven - pans cannot touch thermo bulb.

OVEN PILOT OUTAGE

Safety Thermal Bulb out of position	Re-position the safety thermal bulb.
Problem thermostat	Replace thermostat
Blocked oven vent	Remove obstruction from vent
Incorrect oven burner gas/air mixture	Readjust air

YELLOW FLAME TIPS

Improper gas-air mixture	Adjust air shutter if applicable
Low gas pressure	Check gas supply
	Check for leaks and have the regulator checked
	Set pressure to 11" water column
RA Ranges and Cooktops	
Improper orifice to burner alignment	Realign burner head and orifice tube assembly
	Replace orifice

IDENTIFICATION OF OLDER WEDGEWOOD SYSTEMS

Robertshaw Gas System - Regular Ovens and Cooktop

Models: Serial #'s begin with a W and consist of 6 digits.
(example W840000).

Robertshaw Gas System - High BTU 3 burner Range and

Cooktop Models: Serial #'s begin with a SB and consist of 4 to 9 digits.

PART DIFFERENCES FOR ALL HIGH BTU RANGES AND MAINTOPS-

- Same oven control, regulator, safety-pilot & oven burner as regular ovens & cooktops.
- Earlier models used 2-52123 burner valves on rear burners.
- Manifolds, top burners and maintops are different from standard ranges.

You can identify the system by one of the following:

1. Look at the oven control face plate (behind the knob)
H.W. = Harper Wyman
R.C.C. = Robertshaw Control Co.
2. By looking at the first temperature on the oven knob
140 degrees = Harper Wyman system
170 degrees = Robertshaw system
3. Manifold (shape and color)

Both Robertshaw and Harper Wyman use a dull grey square manifold pipe.

WARNING

PERSONAL INJURY & PROPERTY DAMAGE

- Robertshaw and Harper Wyman gas systems cannot be interchanged.

HARPER WYMAN SYSTEMS EARLY WEDGEWOOD MODELS WITH OLDER SYSTEMS

Between the years of 1991 to 1993 our gas systems were divided between Harper Wyman and Robertshaw. The serial numbers that involve a Harper Wyman and Robertshaw system would be in serial number series W73000 to W839999. The burner maintops and all cosmetic parts are the same. The gas system will be the only difference:

DURING 1978 TO 1980 we used all black square manifolds with the above burner valve, but we used a different oven control/thermostat 3902262 which did not offer a constant burning pilot in oven. They light the pilot on LOW TEMP AND THEN MOVE TO DESIRED TEMPERATURE. When done cooking they simply turn to off. The pilot had to light each time they got ready to use the oven. This control is NO LONGER AVAILABLE, however, you can sub it with the following:

51095 - -Oven control/thermostat looks just like the 3902262 but, this will have a pilot on position where they don't have to light pilot before each use. This control when subbing for the 3902262 must change the oven knob to 51059 (also, known as 52286) even though the controls look alike, the knobs must be changed to provide correct substitution.

Rest of the gas system is as follow:

51096 - -Burner Valve NO LONGER AVAILABLE (same as 51224)

51063 - -Safety Valve (same as 51177)

51062 - -Regulator (same as 52154)

All these parts are still available, no substitutes

DURING 1981 TO 1983 we used the black square manifold systems, along with a different Harper Wyman system, different from the one in 1991 to 1993.

DURING THE MIDDLE YEARS 1960'S TO 1972 Wedgewood used a gas system that used a black round manifold, with the oven control mounting to the front of the stove and does not mount to a manifold. This system is no longer available and no substitutions are available for that system. Part numbers and listed, Johnstone Supply Co. was the supplier. The obsolete part numbers were as follow:

Serial numbers on these ranges would start with the letters C, E, F, and consist of 5 to 6 digits.

Atwood will not be able to supply any parts.

During the Wedgewood years the part numbers consisted of 7 digits. When Atwood took over they needed the part numbers to consist of 5 digits only, so Wedgewood took existing part numbers and dropped the 390 keeping the last four digits and added a 5 to the front (example: 3902281 became 52281)

DURING THE YEARS OF 1972 TO 1978 the following systems were used. We've noted the replacements for these no longer available controls. Serial numbers started with a J, K, G, H and consisted of 5 to 6 digits;

3901183 Oven control mounted to a black square manifold this control used two screws to mount it and the screws went completely through the oven control. NO LONGER AVAILABLE.

USE: 51095 Oven control/thermostat (old 52281) looks different, takes shorter screws for mounting. MUST CHANGE KNOB FOR 51095 TO WORK. Order oven knob #51059, (old 52286) It is designed for the calibration of the control.

3901175 Oven control mounted to a black square manifold. This control installs the same as above, however, it had 3 ports on back; one for center gas pilot. NO LONGER AVAILABLE.

USE: 51095 Oven control/thermostat (old 52281). It looks different, and will DISCONTINUE the center pilot between burners on top. To continue this feature you need to purchase new manifold pipe with ON and OFF valve for center pilot. Knob also needs to be replaced with 51059 (old 52286)

3901184 Oven control mounted to a black square manifold for eye level ranges only. NO LONGER AVAILABLE FOR SUBSTITUTE

3901224 Burner valve used with above controls same as 51224 or use blister pack number 51096. Still available from Atwood. They only mount to BLACK SQUARE MANIFOLDS.

DROP-INS - Wedgewood also, makes drop-in models (D20, D25, D30, D35). We have used this system approximately from the **END OF 1992 TO 1995**, however, February and March of 1995 we changed one burner valve on D30, D35 models. The front burner has been changed to a Hi BTU burner 6500 BTU valve on both burners for models D20 and D25.

Burner valves that are regular 5200 BTU have a black face plate, 6500 BTU valves have a gold face plate.

Maintops are ordered by Model number and color.

Before Atwood purchased Wedgewood in 1986 the model numbers were different. Below is a cross reference chart.

WEDGEWOOD	ATWOOD	DISCONTINUED		
T212	C30	T312	C35	D20
T214	C40	T314	C45	D20
T2122	R1730	T3122	R1735	D25
T2130	R1740	T3130	R1745	D25
T2150	R2140	T3150	R2145	D35
T2142				D25SV
				D25ST
				S=25WHP

If you have a Wedgewood Model number you can use the parts list for Atwood model numbers for cosmetic parts. Depending on the age of the range, the gas system may not be the same. Gas system parts are ordered by either Model or Serial number.

Wedgewood Models numbers discontinued are as follow:

W7102	T2172LL	W2172C
W7103	W2172LL	C7200
		C7300

COOKING APPLIANCE TERMINOLOGY

Terminology	Definition	Terminology	Definition
AGA	American Gas Association	Pilot Orifice	A precision drilled thimble shaped component that meters gas flow to the pilot.
Calibration	The condition that determines whether the thermostat is registering temperatures properly.	Regulator	Device that reduces the high pressure from the LP bottles to a lower pressure for the appliances.
CGA	Canadian Gas Association	Sealed Burner	A burner head attached directly to the porcelain main top which prevents spilling to the burner box.
Electronic Ignition	12v DC module activated by switch to ignite top burners.	Standby Pilot	The oven pilot that burns constantly and provides the base for the heater pilot.
Heater Pilot	An extension of the standby pilot that opens the oven safety valve to enable gas to flow to the oven burner.	Thermal Bulb	The bulb located in the oven and connected to the thermostat that contains thermal fluid and causes the thermostat to close and open based on the set cooking temperature.
Main Burner Orifice	A precision drilled thimble shaped component that meters gas flow to the main burner.	Top Burner Lighter Pilot	The pilot used to light the top burners on older ranges.
Manifold	The constantly pressurized tube or pipe that supplies gas to the burner valves.	UL	Underwriters Laboratories
Oven Safety Valve	The valve that controls the gas flow to the main burner.	Yellow Tipping	A burner flame with yellow tips caused by improper gas/air mixture. Caused by improper alignment or restriction of orifice and venturi tube.
Oven Thermostat	It is the component that regulates the temperature of the oven at the desired cooking temperature and supplies gas for both the standby and heater pilots.		
Piezo Igniter	An electro-mechanical device that can be used to ignite a top burner.		



A Division of Dura Automotive Systems

1120 North Main Street • Elkhart, IN 46514

PHONE: 574•264•2131 FAX: 574•262•2550

INTERNET: <http://www.atwoodmobile.com>

Recreation Vehicle Ranges

Flat Rate Schedule

2/8/06

TIME ALLOWANCE SCHEDULE in hours

	RA 17 & 21	RV1732, RV2132 RV1731, RV2131 RW1731, RW2131 RW1730, RW2130	CW 30 CV 30 CA 31 CV 32	D-21/26/31/36 D-26 SV & SG DA-20/21/30/31 DA-31PE DAS-20/20E/30/32E
Complete Unit.....	1.0	1.0	.7	.5
Bifold Cover.....	.2	.2		
Burner Head.....	.3	.3	.3	.3
Burner Head Electrode.....	.3	.3	.3	.3
Burner, Oven.....	.3	.3		
Cover, Manifold.....	.6*	.6*	.4*	.4*
Handle.....	.2	.2		
Hinge, Door.....	.5	.5		
Ignition Module.....	.7		.7	
Ignition Switch.....	.7		.7	
Oven Control (Thermostat).....	1.0*	1.0*		
Oven Door.....	.3	.3		
Maintop.....	.2	.2	.2	.2
Manifold, Pipe.....	.5	.5	.5	.5
Piezo Igniter.....	.5	.5	.5	
Regulator.....	.5*	.5*	.5	.5
Safety Valve/Pilot Assembly.....	.5	.5		
Seal.....	.3	.3		
Spring, Hinge.....	.3	.5		
Trim, Bottom.....	.6*	.6*		
Trim, Maintop, LH/RH.....	.9*	.9*	.6*	
Trim, Vent Top.....	.7*	.7*	.5*	
Valve, Burner.....	.6	.6	.6	.6
All Other Parts.....	.5*	.5*	.5	.5

* indicates 0.5 hours will be allowed to remove and install the appliance. If two or more parts are replaced on the same appliance during the repair, the R & R allowance to remove the appliance will be applied to only one part.

NO LABOR IS ALLOWED TO CHANGE KNOBS

Above time allowances include all operations involved in the diagnosis, location and replacement of part. Also, included is the time required to remove and replace any part or assembly that is in the path of a part being replaced and gas leak test when applicable.

FOR EFFICIENT PROCESSING OF CLAIM

1. Call for a RGN number.
2. Fill Warranty Service Report form out completely.
3. Using tape or a tag mark the returning part with the RGN #.
4. Package part including the Warranty Service Report in the box.
5. On the outside of the package clearly mark the RGN number.
6. Return part to the correct Division of Atwood Mobile Products.

Return Goods Policy

Effective August 7, 1995, all Atwood defective returns will no longer be repaired at the warehouses and returned to customers. Defective returns will be shipped back to the respective manufacturing facility for problem cause analysis within 30 days of sales. Full credit will be issued if the cause analysis determines Atwood is responsible. If the cause analysis determines the customer is responsible, partial or no credit will be issued.

Warranty Returns - the warranty policy, must return policy and approved labor rates provide the framework for warranty returns by product line.

Non-Defective Returns - A restocking fee of 20% will be charged for handling of overstock returns or standard stock items ordered incorrectly by the customer providing the product is received in resalable condition. **Product that has been specifically designed at a customers request is non-returnable. Obsolete or out dated product will not be accepted for credit.**

Shipping Damage - Once the product has been accepted at its final destination it is the customers responsibility to file a damage claim with the carrier.

Follow **Warranty Procedures** for Atwood returns.

Return Parts

When returning parts, there are three divisions responsible for specific product and their claims. Prior to returning parts, a Return Goods Number (RGN) must be obtained by calling the Atwood Mobile Product Service Department at 1-866-869-3118.

Shipping - Reasonable shipping charges are reimbursed on defective and warranty parts if the analysis determines Atwood is responsible for the disposition. All products not shipped via Atwood trucks should be shipped prepaid via UPS ground unless negotiated at the time the RGN is given. No collect shipments will be accepted.

Packaging - The RGN must be identified on each container & all packing information. Product returned must be properly packaged to prevent shipping damage. Full credit will not be issued on product sent back on an open skid or improperly packaged. Additional product boxes are available upon request.

Submit claims to the correct division. Failure to do so makes claim processing a more difficult and lengthy process delaying payment of your claims. Together we can maintain a speedy and efficient warranty program.

HARDWARE (jacks, couplers, 5th wheel & braking systems)

Atwood Mobile Products
West Union Operation
800 Hwy 150 S
West Union, IA 52175

FURNACE/LP DETECTORS/ELECTRONICS

Atwood Mobile Products
Salt Lake City Operations
1874 South Pioneer Road
Salt Lake City, UT 84104

CO DETECTOR

KIDDE Safety (1-800-880-6788)
1394 South Third Street
Mebane, NC 27302

WATER HEATERS/RANGE/COOK TOPS/DROP-INS

Atwood Mobile Products
Wedgewood Operations
6320 Kelly Willis Road
Greenbrier, TN 37073

Must Return Parts List

Atwood's Warranty Administration Program requires, the return of warranty claims and the specific parts noted below. **Failure** to accompany your claims with these parts will result in the **non-shipment of a replacement part**, or the **non-processing of the appropriate credit** until such time as the part is received by Atwood.

Before returning the part, a **RGN (Return Goods Number)** must be obtained. This number can be acquired for all products except seating, by calling the Atwood Mobile Products Service Department at 1-866-869-3118. To obtain RGN's for seating components, please call 1-574-522-7891. **Without this RGN appearing on the outside of the shipping carton, the shipment will be refused at our receiving department.**

FURNACE

All parts

HARDWARE

Couplers
Jacks
Actuators
Master cylinders
Shock absorbers
Foundation brakes
Power jacks
Power jack motors
All 5th Wheel items

RANGE & OVENS

Regulators
Oven thermostats
Safety pilot valves
Burner valves
Manifolds
Top pilot valves
12v ignition module
Burners w/ignition
electrode
Complete ranges (BY
APPROVAL ONLY)

SEATING COMPONENTS

All parts

WATER HEATER

Complete water heaters
Inner tanks
Gas thermostat valves
Circuit boards
Gas solenoid valves
Electric thermostats
Heating elements
Pilot assemblies
Spark probe assemblies
E.C.O. & T-stat kits
Thermal cut-offs
Pressure-Temperature
Relief
Valves

COOKING APPLIANCE LIMITED WARRANTY

Atwood Mobile Products warrants to the original owner and subject to the below mentioned conditions, that this product will be free of defects in material or workmanship for a period of two years from the original date of purchase. Atwood's liability hereunder is limited to the replacement of the product, repair of the product, or replacement of the product with a reconditioned product at the discretion of Atwood Mobile Products. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering or other causes not arising from defects in material workmanship. This warranty extends to the original owner of the product only and is subject to the following conditions:

1. For two years from the date of the original purchase Atwood warrants that this product will be free of defects in material and workmanship with the exceptions noted below. This warranty includes reasonable labor charges required to remove and replace the part. Service calls to the customer's location are not considered part of these charges and are therefore the responsibility of the owner.
2. This warranty does not cover the following items classified as normal maintenance and/or customer damage.
 - a. Damage, discoloration or scratches to porcelain enamel or other finishes from improper use and care.
 - b. adjustment of gas pressure
 - c. cleaning or adjustment of any burners
 - d. cleaning or replacement of burner orifices
 - e. cleaning or adjustment of pilot and thermocouple
 - f. damage to glass
 - g. products purchased for commercial or industrial use.
3. In the event of warranty claim the owner must contact in advance either an authorized Atwood Service Station or the Atwood Service Department. Warranty claim service must be performed at an authorized Atwood Service Station (a list will be provided at no charge) or as approved by the Atwood Service Department Atwood Mobile Products, 1120 North Main St., Elkhart, IN 46514 USA. Phone 574-262-2655.
4. Return parts must be shipped to Atwood Mobile Products "prepaid". Credit for shipping costs will be included with the warranty claim. The defective parts become the property of Atwood Mobile Products and must be returned to the Consumer Service Department, Atwood Mobile Products, Greenbrier Operations, 6320 Kelly Willis Road, Greenbrier, TN 37073 USA.
5. This warranty applies only if the unit is installed according to the installation instructions provided and complies with local and state codes.
6. The warranty on replacement parts is the unused portion of the original warranty period.
7. Damage or failure resulting from misuse (including failure to seek proper repair service) misapplication, alterations, water damage or freezing are owner's responsibility.
8. Atwood does not assume responsibility for any loss of use of vehicle, loss of time, inconvenience, expense for gasoline, telephone, travel, lodging, loss or damage to personal property or revenues. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.
9. Any implied warranties are limited to two (2) years. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary, from State to State.
10. Replacement parts purchased outside the original cooking warranty carry a 90 day warranty. This includes the part at no charge and reasonable labor charges to replace it.

This Atwood product is designed for use in recreation vehicles for the purpose as stated in the 'data plate'. Any other use, unless authorized in writing by the Atwood Engineering Department, voids the warranty. Atwood/Wedgewood Vision Products include range/oven, drop-in, slide-in and high pressure stoves.

Warranty Procedures

Atwood water heater, furnace, range, hardware or detector warranties can be submitted in one of two ways.

If you are already set up with an owner care program with an OEM, you should submit the faulty part and claim through their system.

To submit a claim directly through Atwood the following information is required:



1. **Owner's Name and Address.**
2. **Date of Purchase** - obtain from copy of original bill of sale.
3. **Model and Serial Number** - The model and serial number, which is located on every water heater, furnace and range is required on all Atwood appliance claims.
4. **Manufacturer, Model, Year and VIN # of RV.**
5. **Work Performed** - Describe in detail findings of existing problem and corrective measure taken.
6. **Return Parts** - A "MUST RETURN" parts list is attached. Failure to return parts listed will result in denial of your warranty claim.
7. **Return Good Number** - a Return Goods Number (RGN) must accompany all returned parts. This number may be obtained by calling the Atwood Mobile Products Service Department at 1-866-869-3118. The RGN must be clearly marked on the outside of each carton. Failure to do so will result in your shipment being refused at our receiving department.
8. **Return Freight - Atwood does not accept C.O.D. shipments.** Freight to return parts to Atwood should be indicated on your claim or repair order and you will be reimbursed.
9. **Travel Time** - Because our warranty is based on the customers ability to present the unit for service, and in an attempt to maintain our low cost products, reimbursement for mileage, service calls and travel time **WILL NOT BE ALLOWED.**
10. **Payment for Warranty Service** - All parts are replaced at no charge, freight prepaid upon our inspection. Labor, on net 30 accounts is paid by credit memo within 30 days of receipt of parts.
11. **Flat Rate Schedule** - A reasonable flat rate schedule for warranty repairs has been set for each Atwood product and/or parts. Should unusual circumstances take you beyond the standard time allowance, you must have prior approval by contacting the Atwood Mobile Products Service Department at 1-866-869-3118.

NOTES

THIS PAGE INTENTIONALLY LEFT BLANK

RV Series Range & Slide-In Match Light and Piezo

RA Series Range & Slide-In Piezo and Electronic Ignition

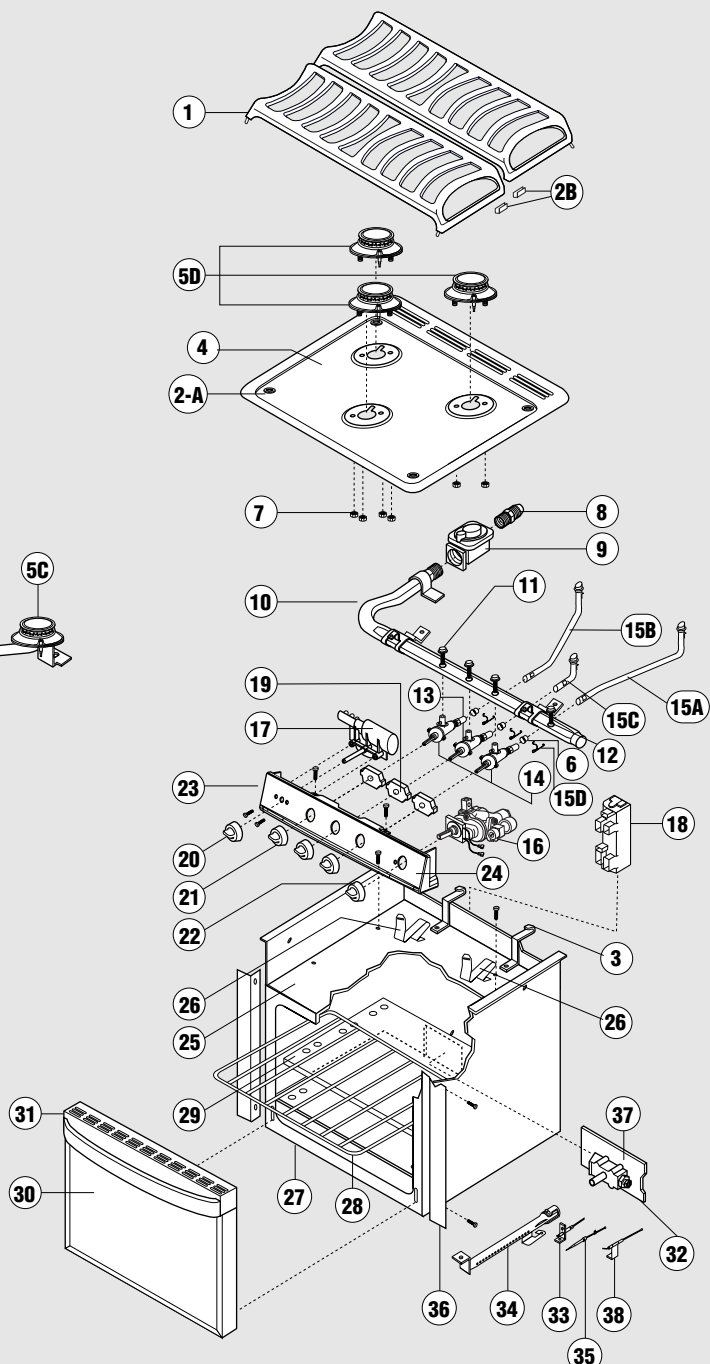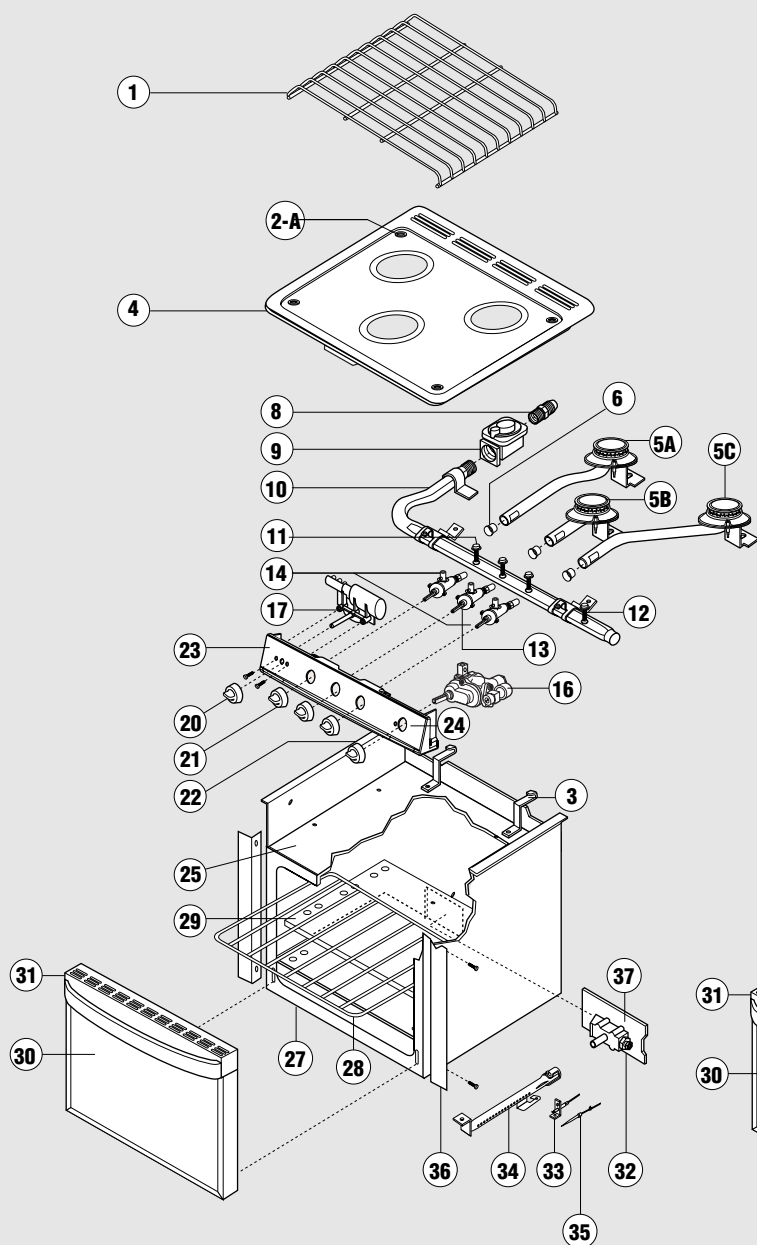

Order by model, color and style
not shown in illustration

◆
N/S

commander par couleur
pas montré

ATWOOD & WEDGEWOOD


Oven & Slide-In Cooktop Parts Identification

ITEM		WEDGEWOOD			ATWOOD		
		RV		CV	RA		CA
		1733	2133	33	1733	2133	33
1	Grate - black	56272	56272	56272	57190	57190	57190
2A	Grommet (4)	53009	53009	53009	53009	53009	53009
2B	Sealed Grate U-Channel				57194	57194	57194
3	Top Spring Clip (2)	51035	51035	51035	51035	51035	51035
4-A	Range Top Assy - white	52007	52007	52007	57300	57300	57300
4-B	Range Top Assy - black	52008	52008	52008	57299	57299	57299
4-C	Range Top Assy - bisque	52009	52009	52009			
4-D	Range Top Assy - stainless steel	56742	56742	56742	57309	57309	57309
5-A	Burner, Piezo - left rear	57205	57205	57205			
5-A	Burner, Matchlit - left rear	57206	57206	57206			
5-B	Burner, Piezo - center front	57201	57201	57201			
5-B	Burner, Matchlit - center front	57202	57202	57202			
5-C	Burner, Piezo - right rear	57203	57203	57203			
5-C	Burner, Matchlit - right rear	57204	57204	57204			
5-D	Burner, Piezo/Electronic Ignition				57276	57276	57276
6	Bushing, Burner (3)	53011	53011	53011	53011	53011	53011
7	Hex Nut (2)				51004	51004	51004
8	Brass Fitting	52294	52294	52294	52294	52294	52294
9	Pressure Regulator	51062	51062	51062	51062	51062	51062
10	3-Burner Manifold	57270	57270	57268	57270	57270	57268
11	Valve thru Bolt	57278	57278	57278	57278	57278	57278
12	Bolt Oven Thermostat thru Bolt (1)	57266	57266		57266	57266	
13	Valve, Burner-Mini 9000 BTU (1)	57252	57252	57252	57252	57252	57252
14	Valve, Burner-Mini 6500 BTU (2)	57251	57251	57251	57251	57251	57251
15-A	Burner Tube Assy- right rear				57110	57110	57110
15-B	Burner Tube Assy- left rear				57108	57108	57108
15-C	Burner Tube Assy- center front				57109	57109	57109
15-D	Burner Clip, wire (3)				57198	57198	57198
16A	Thermostat, oven control	57294	57294		57294	57294	
16B	Thermostat, oven control w/switch				57265	57265	
17	Piezo Ignitor	56096	56096	56096	56096	56096	56096
18	12V Ignition Module				57277	57277	57277
19	Valve Ignition Switch				56163	56163	56163
20A	Piezo Knob -black	51344	51344	51344	51344	51344	51344
20B	Piezo Knob -white	53223	53223	53223	53223	53223	53223
21A	Burner Knob - black	56148	56148	56148	56148	56148	56148
21B	Burner Knob - white	53221	53221	53221	53221	53221	53221
22A	Oven Thermostat Knob - black	57258	57258		57258	57258	
22B	Oven Thermostat Knob - white	57291	57291		57291	57291	
23	Control Panel Assy- w/o Label	◆	◆	◆	◆	◆	◆
24	Control Panel Label	◆	◆	◆	◆	◆	◆
25	Burner Box	51687	51687	51687	51687	51687	51687
26	Burner Spring Clips (3)				57095	57095	57095
27	Oven Can	51969	51970		51969	51970	
28	Oven rack	51069	51069		51069	51069	
29	Oven shelf	51670	51670		51670	51670	
30-A	Door assembly includes handle - black steel	51977	51983		51977	51983	
30-B	Door assembly includes handle - white steel	51978	51984		51978	51984	
30-C	Door assembly includes handle - white glass	51981	51987		51982	51988	
30-D	Door assembly includes handle - black glass	51980	51986		51980	51986	
30-E	Door assembly includes handle - stainless steel	51958			51958		
30-F	Door assembly white handle - white steel	51957			51957		
31A	Oven Door Handle - black	51124	51124		51124	51124	
31B	Oven Door Handle - white	51126	51126		51126	51126	
32	Orifice Block	57271	57271		57271	57271	
33	Pilot Assembly	57250	57250		57250	57250	
34	Burner, oven	57275	57275		57275	57275	
35	Thermocouple	57274	57274		57274	57274	
36	Oven Can Trim	51975	51976		51975	51976	
37	Orifice Block Plate	57310	57310		57310	57310	
38	Spark Electrode				57292	57292	
N/S	Wiring Harness - Electronic Ignition Switches				57262	57262	57262
	Wiring Lead - Electronic Ignition Electrodes				57261	57261	57261
	Wiring Lead - Electronic Ignition Ground				57260	57260	57260
N/S	Wiring Lead - Piezo	57264	57264	57264	57264	57264	57264
N/S	KIT - Door Seal	51060	51061		51060	51061	
N/S	KIT - Gas Tube Supply Oven	57273	57272		57273	57272	

RA SERIES RANGE & SLIDE-IN

Piezo and Electronic Ignition


30 DOOR CHART	RA-1732	RA-1731	RA-1730	RA-2132	RA-2131	RA-2130
BLACK PANEL/BLACK HANDLE	51977	51977	51873	51983	51983	51871
WHITE PANEL/BLACK HANDLE	51978	51978	51892	51984	51984	51850
WHITE GLASS-WHITE FRAME/BLACK HANDLE	51982	51982	51851	51988	51988	51849
BLACK GLASS-BLACK FRAME/BLACK HANDLE	51980	51980	51872	51986	51986	51870
WHITE GLASS-BLACK FRAME/BLACK HANDLE	51981	51981		51987	51987	
STAINLESS PANEL/WHITE HANDLE	51951	51951				
DOOR-Glass Insert - Sm BLACK	51881	51881	51881			
DOOR-Glass Insert - Lg BLACK			51882	51882	51882	
DOOR-Glass Insert - Sm WHITE	51883	51883	51883			
DOOR-Glass Insert - Lg WHITE			51884	51884	51884	
DOOR-Panel						
Sm BLACK door style w/frame (NLA use 51581)			51885			
Lg BLACK door style w/frame (NLA use 51583)						51886
Sm WHITE door style w/frame (NLA use 51582)			51887			
Lg WHITE door style w/frame (NLA use 51584)			51888			
Sm BLACK new solid door style no trim	51581	51581				
Lg BLACK new solid door style no trim				51583	51583	
Sm WHITE new solid door style no trim	51582	51582				
Lg WHITE new solid door style no trim				51584	51584	
Sm STAINLESS new solid door style no trim	51578	51578				

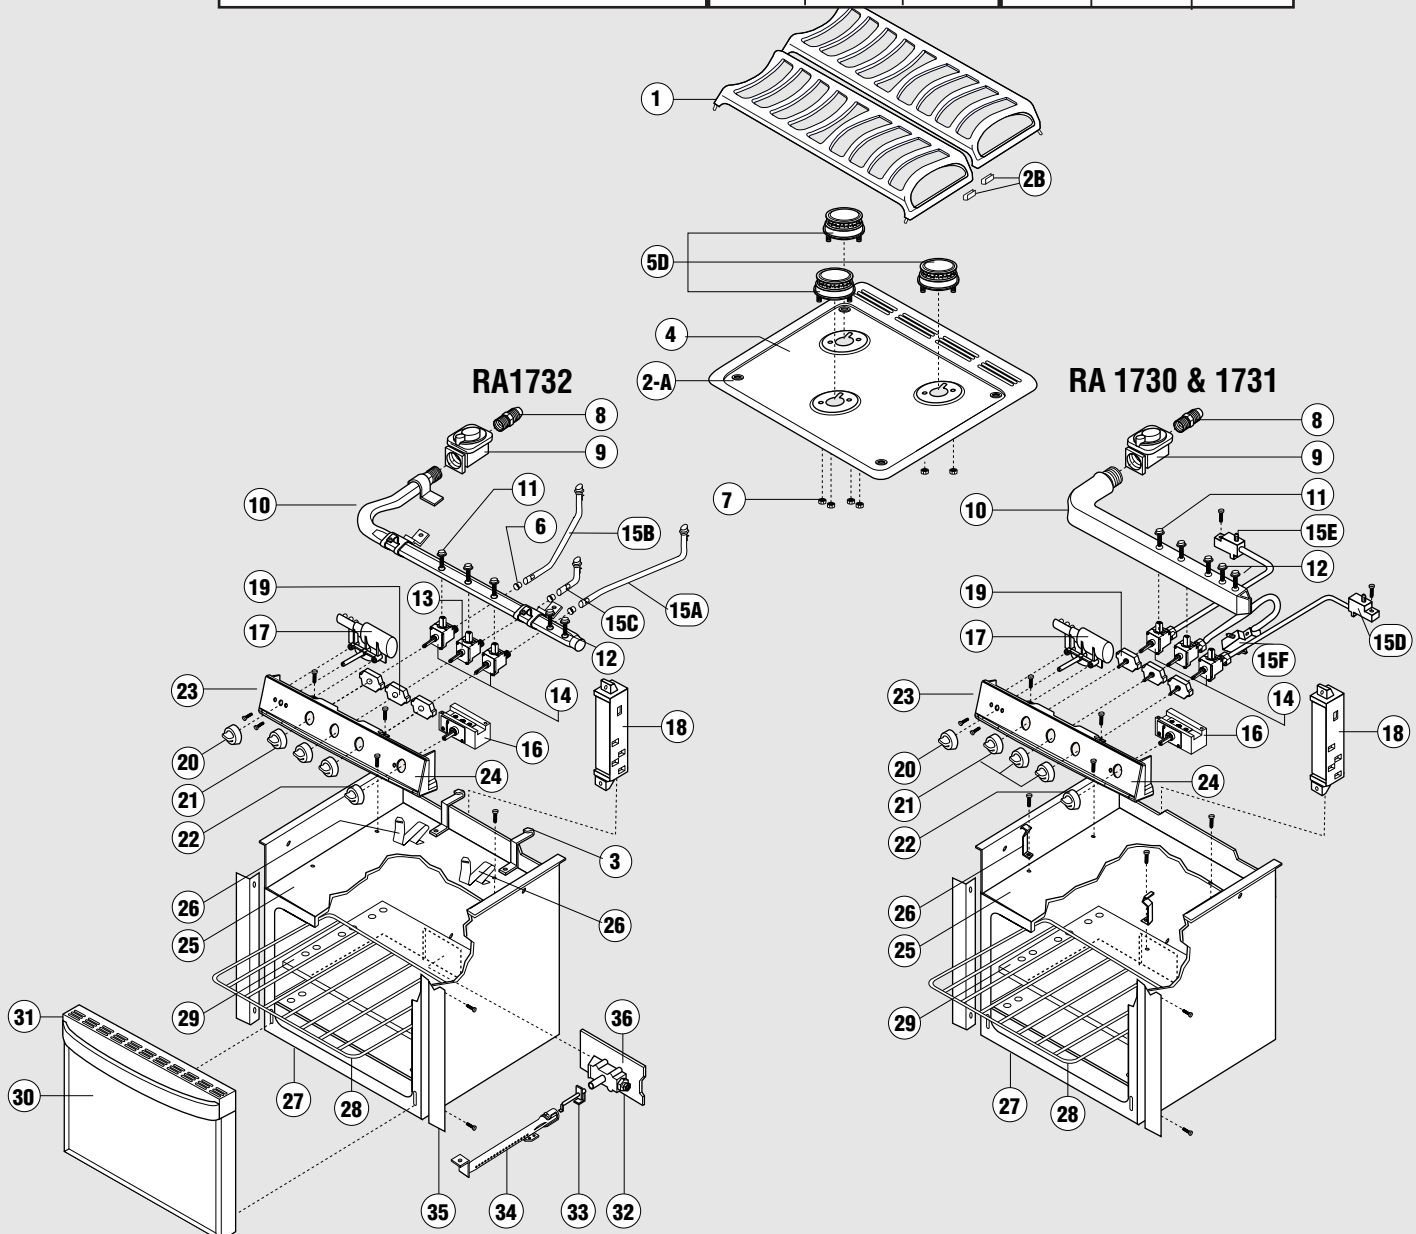

ATWOOD - Oven & Slide-In Cooktop Parts Identification

ITEM	DESCRIPTION	RA-1732	RA-1731	RA-1730	RA-2132	RA-2131	RA-2130	CA-31	CA-30
1	Grate - BLACK	57190	53443	53443	57190	53443	53443	57190	53443
2	Grommet (4)	57190			57190			57190	
2B	Sealed Grate U-Channel	53009			53009			53009	
3	Top Spring Clip (2)	57194			57194			57194	
4	Range Top Assy - WHITE	57114	52634	52634	57114	52634	52634	57114	52634
	Range Top Assy - BLACK	57113	52633	52633	57113	52633	52633	57113	52633
5	Burner, Piezo/Electronic Ignition	57180	56207	56207	57180	56207	56207	57180	56207
	Burner, Piezo/Electronic Ignition BLACK		56325	56325		56325			56325
6	Bushing, Burner (3)	53011			53011			53011	
7	Hex Nut	51004	51004	51004	51004	51004	51004	51004	51004
8	Brass Fitting	52294	52294	52294	52294	52294	52294	52294	52294
9	Pressure Regulator	51062	51062	51062	51062	51062	51062	51062	51062
10	3-Burner Manifold old	NLA							
10	3-Burner Manifold - round	53198	53198	53198	53198	53198	53199	53199	53199
11	Bolt thru Valve	53207	56088	56088	53207	56088	56088	53207	
12	Bolt Oven Thermostat thru Bolt (3)	53208	52125	52125	53208	52125	52125		
13	Valve, Burner - Mini 9000 BTU (1)	53201			53201			53201	
14	Valve, Burner - Mini 65000 BTU (2)	53200			53200			53200	
15A	Burner Tube Assy -RR	57110			57110			57110	
15B	Burner Tube Assy - LR	57108			57108			57108	
15C	Burner Tube Assy - CF	57109			57109			57109	
15	Valve, Orifice Tube Assy-Mini 6500 - RR	NLA USE	53206						
	Valve, Orifice Tube Assy-Mini 6500 - LR	NLA USE	53203						
	Valve, Orifice Tube Assy-Mini 9000 - CF	NLA USE	53202						
15D	Valve, Orifice Tube Assy-Mini 6500 - RR rd mfd		53206	53206		53206	53206		53206
15E	Valve, Orifice Tube Assy-Mini 6500 - LR rd mfd		53203	53203		53203	53203		53203
15F	Valve, Orifice Tube Assy-Mini 9000 - CF rd mfd		53202	53202		53202	53202		53202
N/C	Straight Tube (old design)			52271			52271		
16	Thermostat, oven control	56116	56116	56116	56116	56116	56116		
17	Piezo Ignitor	56096	56096	56096	56096	56096	56096	56096	56096
18	12V Ignition Module	56162	56162	56162	56162	56162	56162	56162	56162
19	Valve Ignition Switch	56163	56163	56163	56163	56163	56163	56163	56163
20	Piezo Knob -BLACK	51344	51344	51344	51344	51344	51344	51344	51344
20	Piezo Knob -WHITE	53223	53223		53223			53223	
21	Burner Knob - BLACK	56148	56148	56148	56148	56148	56148	56148	56148
21	Burner Knob - WHITE	53221	53221	53221	53221	53221	53221	53221	53221
22	Oven Thermostat Knob - BLACK	53907	53907	53907	53907	53907	53907		
22	Oven Thermostat Knob - WHITE	53222	53222	53222	53222	53222	53222		
23	Control Panel - black	52621	52621	52621	52621	52621	52621	52621	52621
	Control Panel -Electric-white	52606	52606	52606	52606	52606	52606		
24	LABEL - Piezo - black	56177	56177	56177	56177	56177	56177	56179	56179
	LABEL - Piezo - white	56181	56181	56181	56181	56181	56181	56183	56183
	LABEL - Electric-black	56176	56176	56178	56176	56176	56178	56178	56178
	LABEL - Electric-white	56180	56180	56182	56180	56180	56182	56182	56182
N/S	Wiring Harness - Electronic Ignition Switches	56164	56164	56164	56164	56164	56164	56164	56164
	Wiring Harness - Electronic Ignition Electrodes	56165	56165	56165	56165	56165	56165	56165	56165
	Wiring Harness - Electronic Ignition Ground	56184	56184	56184	56184	56184	56184	56184	56184
	Wiring Lead - Piezo	56061	56061	56061	56061	56061	56061	56061	56061
25	Burner Box	51687	51687	51684	51687	51687	51684	51687	51684
26	Burner Clips	57107 (3)	51111 (2)	51111 (2)	57107 (3)	51111 (2)	51111 (2)	57107 (3)	51111 (2)
27	Oven Can	51969	51969	51902	51970	51970	51901		
28	Oven rack	51069	51069	51069	51069	51069	51069		
29	Oven shelf	51670	51670	51670	51670	51670	51670		
30	DOOR asmbly - see DOOR CHART (left)								
31	Oven Door Handle - BLACK	51124	51124	51124	51124	51124	51124		
31	Oven Door Handle - WHITE	51126	51126	51126	51126	51126	51126		
32	Safety Valve	56120	56120	56120	56120	56120	56120		
33	Pilot Assembly	56121	56121	56121	56121	56121	56121		
34	Burner, oven	56123	56123	56123	56123	56123	56123		
35	Oven Can Trim	51975	51975	51975	51976	51976	51976		
36	Safety Valve Plate	56139	56139	56139	56139	56139	56139		
N/S	KIT - Door Seal	51060	51060	51060	51060	51061	51061		
N/S	KIT - Gas Tube Kit	51067	51067	51067	51068	51068	51068		
N/S	Door Spring - 17"			51404					
N/S	Door Spring - 21"						51405		
N/S	Hinge Assy	51972	51972		51991	51991			
N/S	Towel Bar	53205	53205	53205	53205	53205	53205		
N/S Not shown in illustration									

RV Series Range & Slide-In Match Light and Piezo

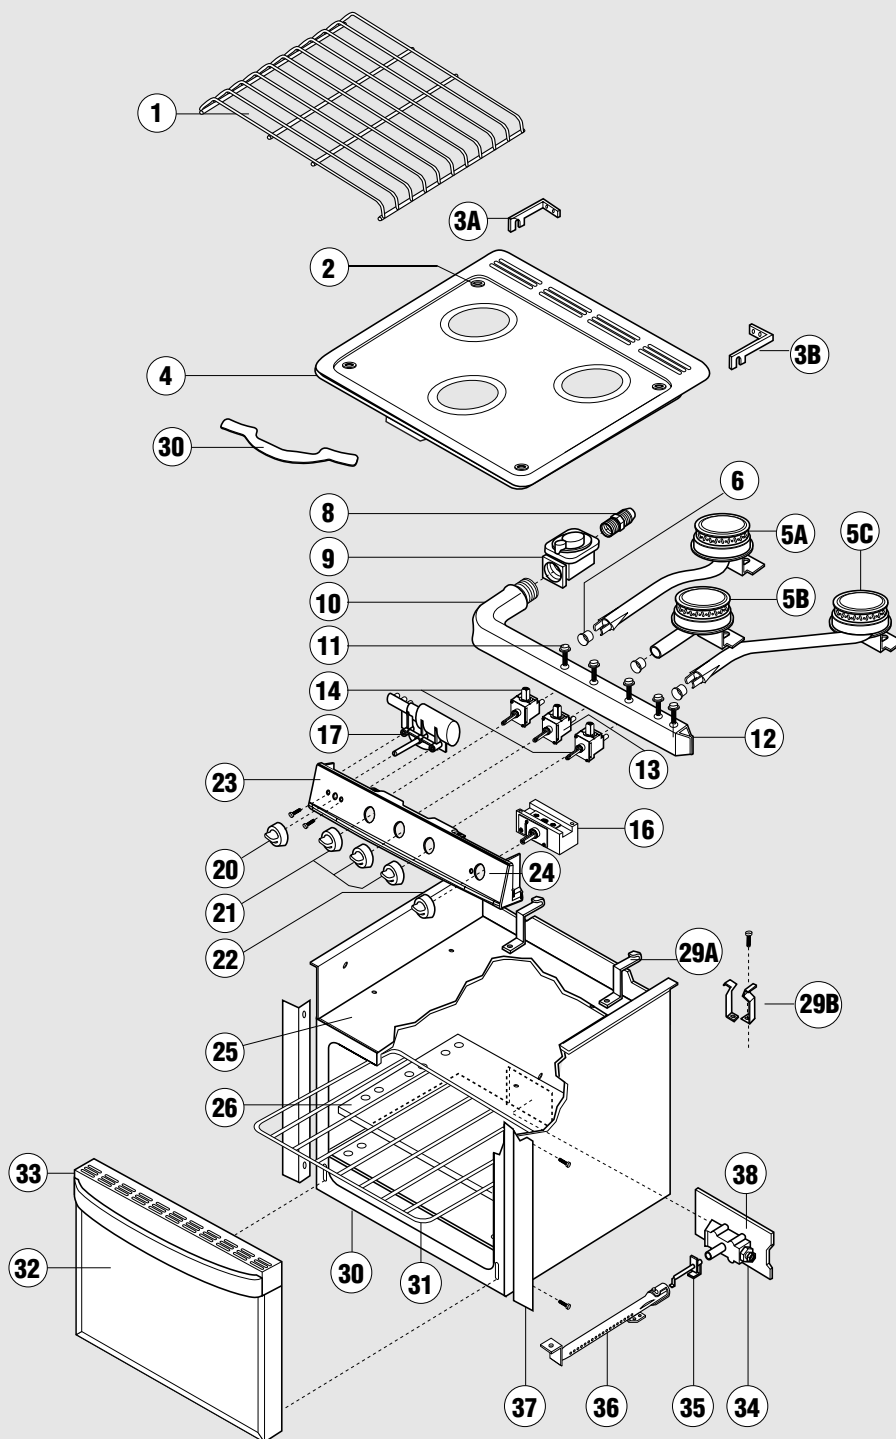


order by color ♦
not shown in illustration N/S

WEDGEWOOD VISION - Oven & Slide-In Cooktop Parts Identification

ITEM	DESCRIPTION	RV-1732	RV-1731	RV-2132	RV-2131	CV-32	CV-30
1	Grate - BLACK	56272	5672	56272	56272	56272	56272
2	Grommet (total 4-1 each corner)	53009	53009	53009	53009	53009	53009
3A	Top Bracket - left		51131		51131		51131
3B	Top Bracket - right		51130		51130		51130
4	Range Top Assy - WHITE	52007	52635	52007	52635	52007	52685
	Range Top Assy - BLACK	52008	52636	52008	52636	52008	52636
	Range Top Assy - BISQUE	52009	52638	52009	52638	52009	52638
	Range Top Assy - STAINLESS STEEL	56742		56742		56742	
5-A	Burner, Piezo - LR	56156	56156	56156	56156	56156	56156
5-A	Burner, Matchlit - LR	56159	56159	56159	56159	56159	56159
5-B	Burner, Piezo - CF	56155	56155	56155	56155	56155	56155
5-B	Burner, Matchlit - CF	56158	56158	56158	56158	56158	56158
5-C	Burner, Piezo - RR	56154	56154	56154	56154	56154	56154
5-C	Burner, Matchlit - RR	56157	56157	56157	56157	56157	56157
6	Bushing, Burner	53011	53011	53011	53011	53011	53011
8	Brass Fitting	52294	52294	52294	52294	52294	52294
9	Pressure Regulator	51062	51062	51062	51062	51062	51062
10	3-Burner Manifold	50158	50158	50158	50158	50159	50159
NS	3-Burner Manifold - round	53198		53198		53199	53199
11	Bolt thru Valve	56088	56088	56088	56088	56088	56088
12	Bolt Oven Thermostat thru Bolt (2)	56125	56125	56125	56125		
13	Valve, Burner-Mini 9000 BTU (1) NLA						
14	Valve, Burner-Mini 6500 BTU (2) NLA						
NS	Valve, Burner-Mini 9000 BTU (1)	53201	53201	53201	53201	53201	53201
NS	Valve, Burner-Mini 6500 BTU (2)	53200	53200	53200	53200	53200	53200
16	Thermostat, oven control	56116	56116	56116	56116		
17	Piezo Ignitor	56096	56096	56096	56096	56096	56096
20	Piezo Knob -BLACK	51344	51344	51344	51344	51344	51344
20	Piezo Knob -WHITE	53223		53223			
21	Burner Knob - BLACK	56148	56148	56148	56148	56148	56148
21	Burner Knob - WHITE	53221		53221			
22	Oven Thermostat Knob - BLACK	53097	53097	53097	53097		
22	Oven Thermostat Knob - WHITE	53222		53222			
23	Control Panel Assy - BLACK	52621	52621	52621	52621	52621	52621
	Control Panel Assy - WHITE	52606	52606	52606	52606	52606	52606
24	LABEL - Piezo - BLACK	56219	56219	56219	56219	56223	56223
	LABEL - Piezo - WHITE	56224	56224	56224	56224		
	LABEL - Matchlit - BLACK	56218	56218	56218	56218	56220	56220
25	Burner Box	51687	51687	51687	51687	51687	51687
26	Oven shelf	51670		51670			
27	Oven Can	51969	51969	51970	51970		
29A	Top Spring Clip	51035		51035		51035	
29B	Top Locating Clips (4)		51111		51111		51111
30	Top Hold Down Clip		53057		53057		53057
31	Oven rack	51069	51069	51069	51069		
30	DOOR asmbly w/handle - BLACK STEEL-BLACK PANEL/BLACK HANDLE	51977	51977	51983	51983		
	DOOR asmbly w/handle - WHITE STEEL-WHITE PANEL/BLACK HANDLE	51978	51978	51984	51984		
	DOOR asmbly w/handle - BLACK GLASS-BLACK FRAME/BLACK HANDLE	51980	51980	51986	51986		
	DOOR asmbly w/handle - WHITE GLASS-BLACK FRAME/BLACK HANDLE	51981	51981	51987	51987		
	DOOR asmbly w/handle - WHITE GLASS-WHITE FRAME/BLACK HANDLE	51982	51851	51988	51849		
	DOOR asmbly w/handle - WHITE STEEL-WHITE PANEL/WHITE HANDLE	51957					
	DOOR asmbly w/handle - ?-STAINLESS ?/BLACK HANDLE	51958					
	DOOR-Glass Insert - Sm BLACK	51881	51881				
	DOOR-Glass Insert - Lg BLACK			51882	51882		
	DOOR-Glass Insert - Sm WHITE	51883	51883				
	DOOR-Glass Insert - Lg WHITE			51884	51884		
	DOOR-Panel - Sm BLACK door style with frame (NLA use 51581)	51885	51885				
	DOOR-Panel - Lg BLACK door style with frame (NLA use 51583)			51886	51886		
	DOOR-Panel - Sm WHITE door style with frame (NLA use 51582)	51887	51887				
	DOOR-Panel - Lg WHITE door style with frame (NLA use 51584)			51888	51888		
	DOOR-Panel - Sm BLACK new solid door style no frame	51581					
	DOOR-Panel - Lg BLACK new solid door style no frame			51583			
	DOOR-Panel - Sm WHITE new solid door style no frame	51582					
	DOOR-Panel - Lg WHITE new solid door style no frame			51584			
	DOOR-Panel - Sm STAINLESS new solid door style no frame	51578					
33	Oven Door Handle - BLACK	51124	51124	51124	51124		
33	Oven Door Handle - WHITE	51126		51126			
34	Safety Valve	56120	56120	56120	56120		
35	Pilot Assembly	56121	56121	56121	56121		
36	Burner, oven	56123	56123	56123	56123		
37	Oven Can Trim	51975	51975	51976	51976		
38	Safety Valve Plate	56139	56139	56139	56139		
N/S	Wiring Lead - Piezo	56097	56097	56097	56907	56097	56907
N/S	KIT - Door Seal	51060	51060	51061	51061		
N/S	KIT - Gas Tube Kit	51067	51067	51068	51068		
N/S	Hinge Assy	51972	51972	51991	51991		
N/S	U Channel Edge Guard	53218	53218	53218	53218	53218	53218

WEDGEWOOD Range & Slide-In Match Light and Piezo



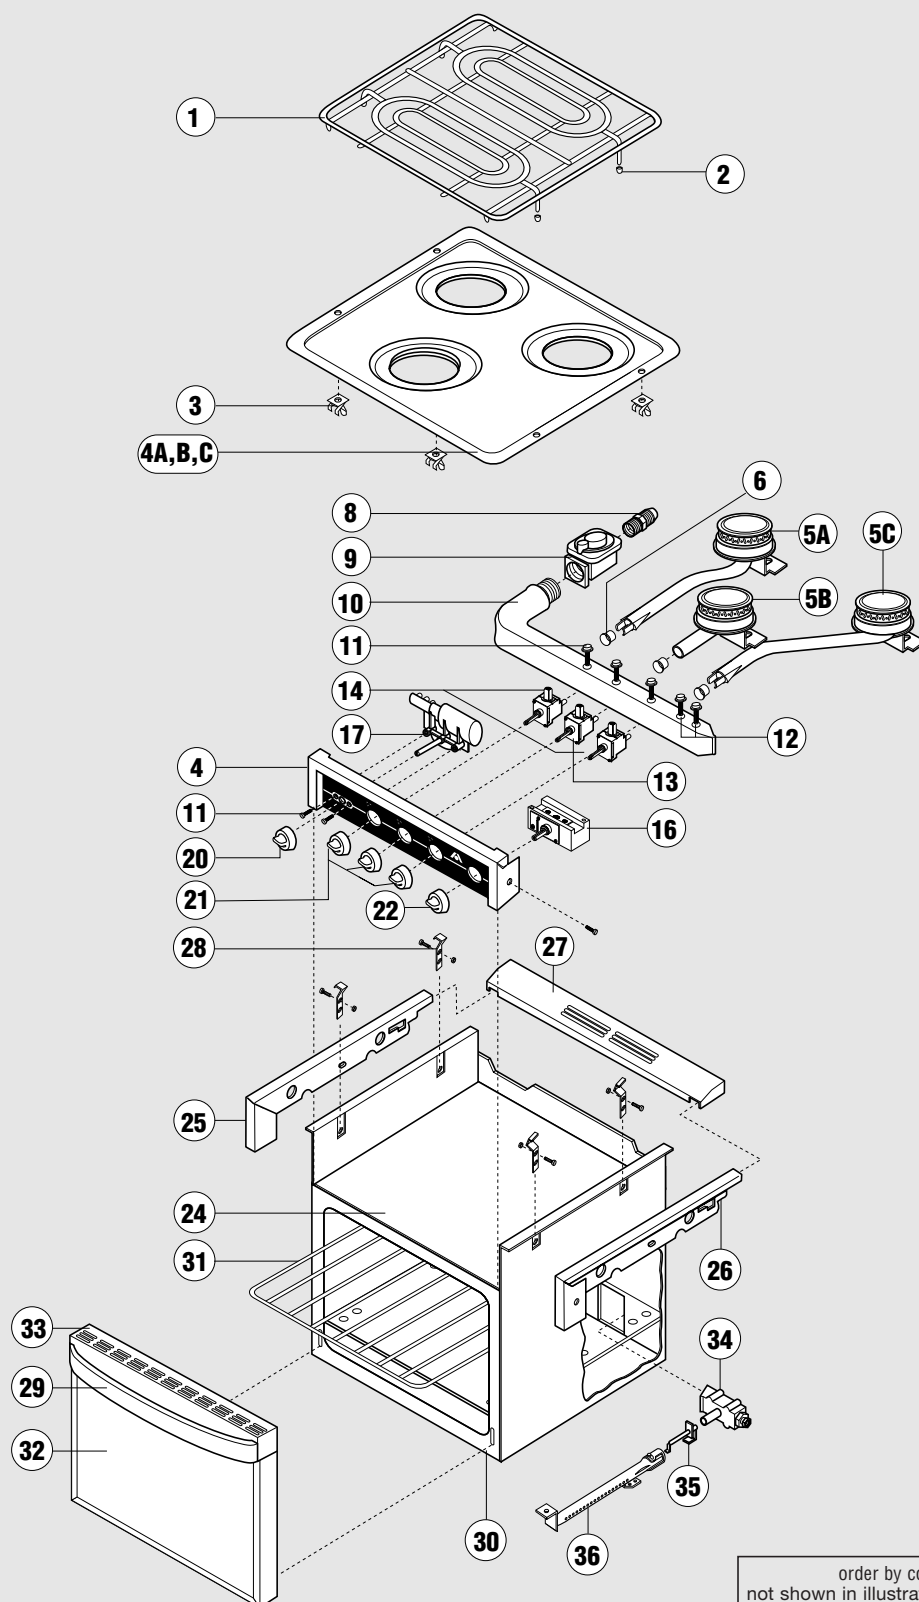


order by color ♦
not shown in illustration N/S

WEDGEWOOD -Oven & Slide-In Cooktop Parts Identification


	WEDGEWOOD - DESCRIPTION	RW-1731	RW-1730	RW-2131	RW-2130	CW-30
1	Grate (2 hole) - BLACK	56271	56271	56271	56271	56271
2	Grate Boot	53008	53008	53008	53008	53008
3	Grate Clip	56150	56150	56150	56150	56150
4	Range Top (2 hole) - WHITE	53584	53584	53584	53584	53584
	Range Top (2 hole) - BLACK	53583	53583	53583	53583	53583
	Range Top (2 hole) - ALMOND	53582	53582	53582	53582	53582
5-A	Burner, Piezo - left rear	56066	56066	56066	56066	56066
5-A	Burner, Matchlit - left rear	56069	56069	56069	56069	56069
5-B	Burner, Piezo - center front	56068	56068	56068	56068	56068
5-B	Burner, Matchlit - center front	56071	56071	56071	56071	56071
5-C	Burner, Piezo - right rear	56067	56067	56067	56067	56067
5-C	Burner, Matchlit - right rear	56070	56070	56070	56070	56070
6	Bushing, Burner	53011	53011	53011	53011	53011
8	Brass Fitting	52294	52294	52294	52294	52294
9	Pressure Regulator	51062	51062	51062	51062	51062
10	3-Burner Manifold	56160	56160	56160	56160	56072
11	Valve thru Bolt	56088	56088	56088	56088	56088
12	Bolt Oven Thermostat thru Bolt (2)	56125	56125	56125	56125	
13	Valve, Burner-Mini 9000 BTU (1)	53201	53201	53201	53201	53201
14	Valve, Burner-Mini 6500 BTU (2)	53200	53200	53200	53200	53200
16	Thermostat, oven control	56114	56114	56114	56114	
17	Piezo Ignitor	56096	56096	56096	56096	56096
20	KNOB - Piezo -BLACK	51344	51344	51344	51344	51344
21	KNOB - Burner - BLACK	56148	56148	56148	56148	56148
22	KNOB - Oven Thermostat - BLACK	53097	53097	53097	53097	
24	Burner Box	51684	51684	51685	51684	51684
??	Manifold Cover	53110	53110	53110	53110	53110
	LABEL - without Piezo	56101	56101	56101	56101	56104
	LABEL - with Piezo	56103	56103	56103	56103	56102
25	TRIM - Left hand - BLACK	53133	53133	53133	53133	53133
26	TRIM - Right hand - BLACK	53134	53134	53134	53134	53134
27	TRIM - Vent - BLACK	53525	53525	53525	53525	53525
28	Top Retaining Clip (4)	51410	51410	51410	51410	51410
30	Oven Can	51969	51902	51970	51901	
31	Oven rack	51069	51069	51069	51069	
32	DOOR assembly includes handle - BLACK steel	51977	51873	51983	51871	
	DOOR assembly includes handle - WHITE steel	51978	51850	51984	51850	
	DOOR assembly includes handle - ALMOND steel	51979	51894	51985	51893	
	DOOR assembly includes handle - WHITE glass			51987		
	DOOR assembly includes handle - BLACK glass	51980	51872	51986	51870	
	DOOR -Glass Insert - Sm BLACK	51881	51881			
	DOOR -Glass Insert - Lg BLACK			51882	51882	
	DOOR -Glass Insert - Sm WHITE	51883	51883			
	DOOR -Glass Insert - Lg WHITE			51884	51884	
	DOOR -Panel - Sm BLACK	51885	51885			
	DOOR -Panel - Lg BLACK			51886	51886	
	DOOR -Panel - Sm WHITE	51887	51887			
	DOOR -Panel - Lg WHITE			51888	51888	
33	Oven Door Handle - BLACK	51124	51124	51124	51124	
34	Safety Valve	56120	56120	56120	56120	
35	Pilot Assembly	56121	56121	56121	56121	
36	Burner, oven	56123	56123	56123	56123	
37	TRIM - Oven Can	51975		51976		
N/S	Enamel Door Liner	51989	51808	51990	51807	
N/S	Wiring Lead - Piezo	56097	56097	56097	56097	56097
N/S	KIT - Door Seal	51061	51060	51061	51061	
N/S	KIT - Gas Tube Kit	51067	51067	51068	51068	

CABINET & COUNTER CUT OUT CHART

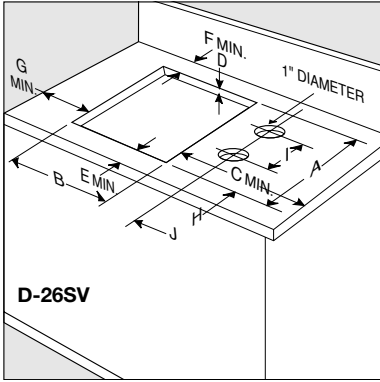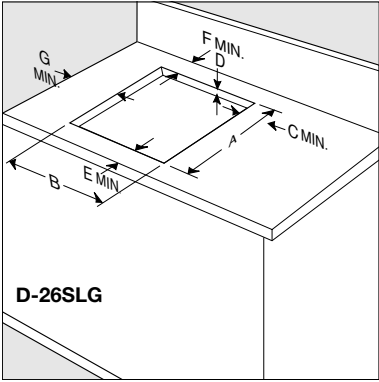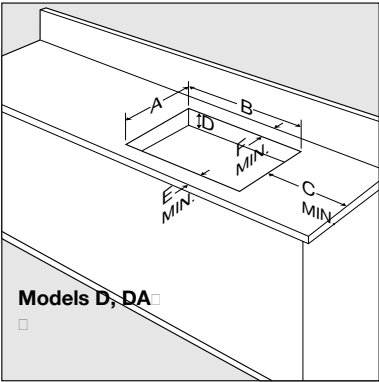


CUT OUT DIMENSIONS	A	B	C	D	E	F	G	H	I	J
D, DA Models - 2 Burners	11-5/8"	16-3/8"	2-1/4" ♦	3-1/8" ▶	3/4" ♦	4-3/4" ♦				
D, DA Models - 3 Burners	16-1/16"	19-3/16"	2-1/2" ♦	3-1/8" ▶	2-3/8" ♦	4" ♦				
D-26SLG	19"	14-1/8"	5/8" ♦	4-1/2" ▶	3/4" ♦	2-3/4" ♦	3"			
D-26SV	11-5/8"	16-3/8"	4-3/8" ♦	3-1/8" ▶	1" ♦	1-1/8" ♦	4-1/4"	3-1/4"	4-3/4"	2-1/4"



♦Minimum dimension ▶ Overall depth of cooktop

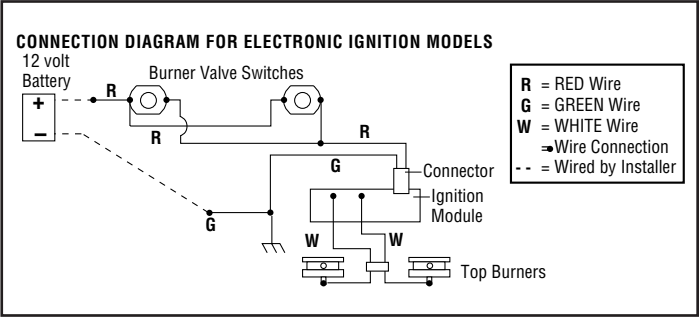


2- Burner LP Gas High Pressure Stove

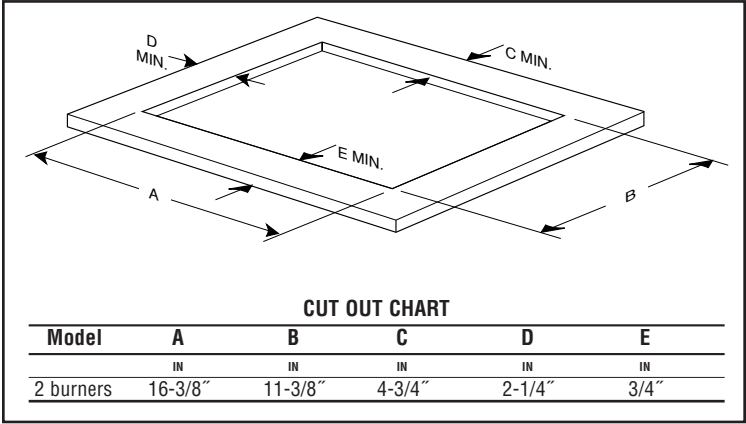

CABINET & COUNTER CUT OUT CHART

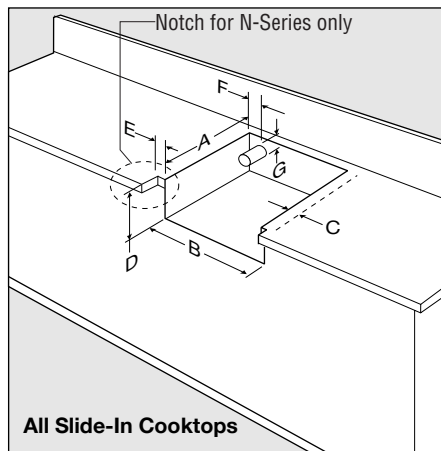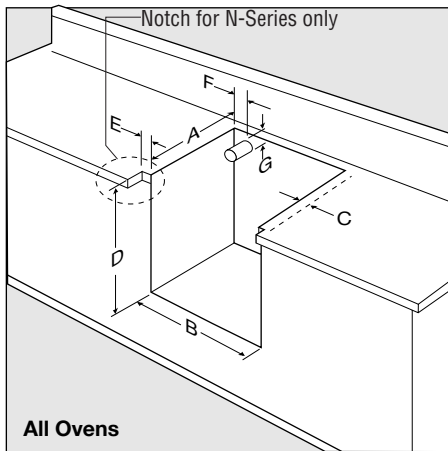

RECESSED BI-FOLD COVER CUT OUT CHART

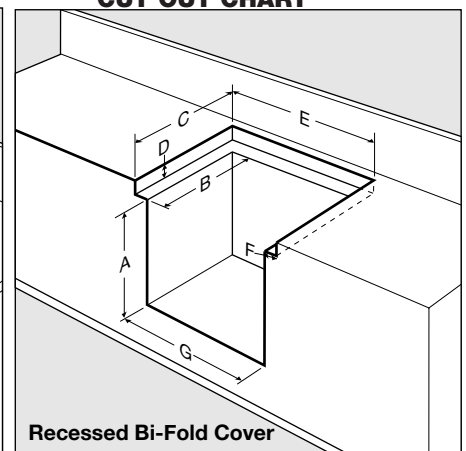

CABINET & COUNTER CUT OUT CHART - TABLEAU DE DECOUPE DES ELEMENTS ET DU COMPTOIR

CUT OUT DIMENSIONS - DIMENSIONS DE LA DECOUPE	A	B	C	D	E	F	G
17" RV & RA Ranges Série RA 17"	17-3/4"	20-1/4"	1-3/4" †	16"	0"	1-3/4"	1-1/2"
	451 mm	514 mm	45 mm †	406 mm	0mm	45 mm	38 mm
21" RV & RA Ranges Série RA 21"	17-3/4"	20-1/4"	1-3/4" †	20"	0"	1-3/4"	1-1/2"
	451 mm	514 mm	45 mm †	508 mm	0mm	45 mm	338 mm
Slide-In CV & CA Série CA à encastrément	17-3/4"*	20-1/4"	1-3/4" †	3"	0"	1-3/4"	1-1/2"
	451 mm	514 mm	45 mm †	76 mm	0mm	45 mm	38 mm
17" RV & RA-N Series Série RW 43cm RW et RA-N	17-3/4"	20-1/4"	1-3/4" †	16"	7/16"	1-3/4"	1-1/2"
	451 mm	514 mm	45 mm †	406 mm	11 mm	45 mm	38 mm
21" RV & RA-N Series Série RW 53cm RW et RA-N	17-3/4"	20-1/4"	1-3/4" †	20"	7/16"	1-3/4"	1-1/2"
	451 mm	514 mm	45 mm †	508 mm	11 mm	45 mm	38 mm
Slide-In CV & CA-N Series Série CW à encastrément CW et CA-N	17-3/4"	20-1/4"	1-3/4" †	3"	7/16"	1-3/4"	1-1/2"
	451 mm	514 mm	45 mm †	76 mm	11 mm	45 mm	38 mm


† Minimum clearance to combustible materials. (typical two (2) sides and back)
 * The overall unit depth for CA models with Electronic Ignition is 18-1/4" from cabinet face to back wall of cutout below counter.
 † Éloignement minimum des matériaux combustibles. (Typiquement sur les deux côtés et à l'arrière)
 * La profondeur totale des modèles CA à allumage électronique est de (464 mm). Ces dimensions sont celle de la découpe entre la façade de l'élément de cuisine et la paroi arrière du comptoir.

NOTE: Maximum countertop overhang = 3/4" NOTE: rebord maximum du comptoir = 19 mm



RECESSED BI-FOLD COVER - COUVERCLE PLIANT EN DEUX PARTIES ENCASTRÉ




LAMINATE MATERIAL MATÉRIAU STRATIFIÉ	MPD PART #	RV & RA OVEN 17"	RV & RA OVEN 21"	CV & CA SLIDE-IN	CUT OUT DIMENSIONS - DIMENSIONS DE LA DECOUPE					
		A	A	A	B	C	D	E	F	G
1/4"	56397	16.0"	20.0"	3.0"	17.75"	20.0"	2.31"	24.5"	2.13"	20.25"
6 mm		406 mm	508 mm	76 mm	451 mm	508 mm	59 mm	622 mm	54 mm	514 mm
1/32"	56391	16.0"	20.0"	3.0"	17.75"	20.0"	1.84"	24.5"	2.13	20.25"
.8 mm		406 mm	508 mm	76 mm	451 mm	508 mm	47 mm	622 mm	54 mm	514 mm

SCHEMATIC DIAGRAM FOR ELECTRONIC IGNITION MODELS

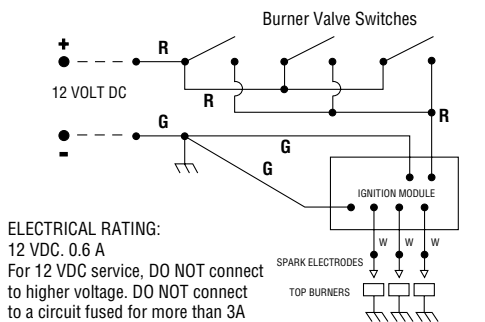

CONNECTION DIAGRAM FOR ELECTRONIC IGNITION MODELS

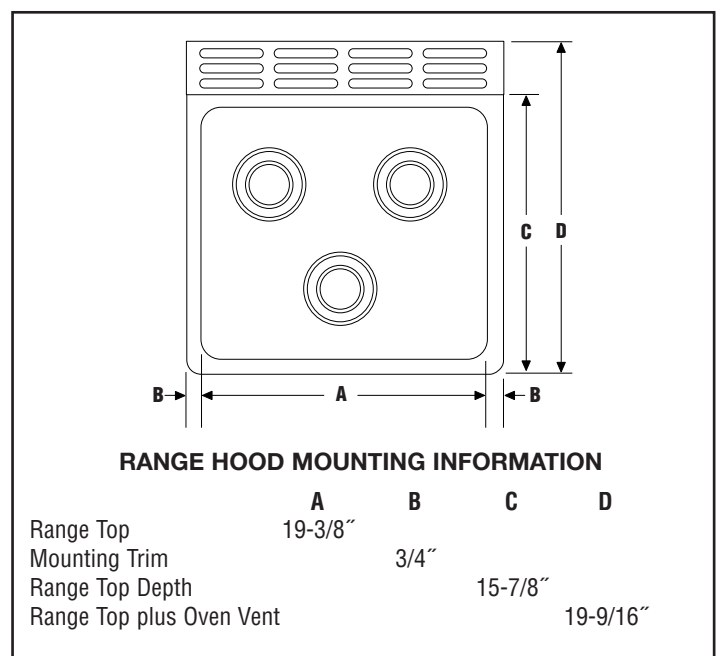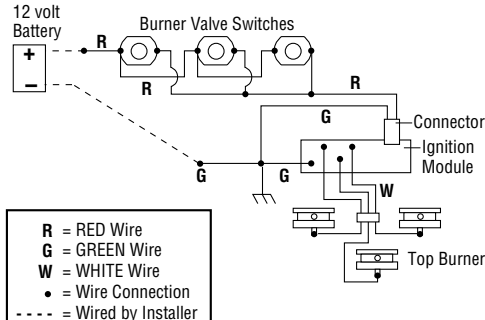

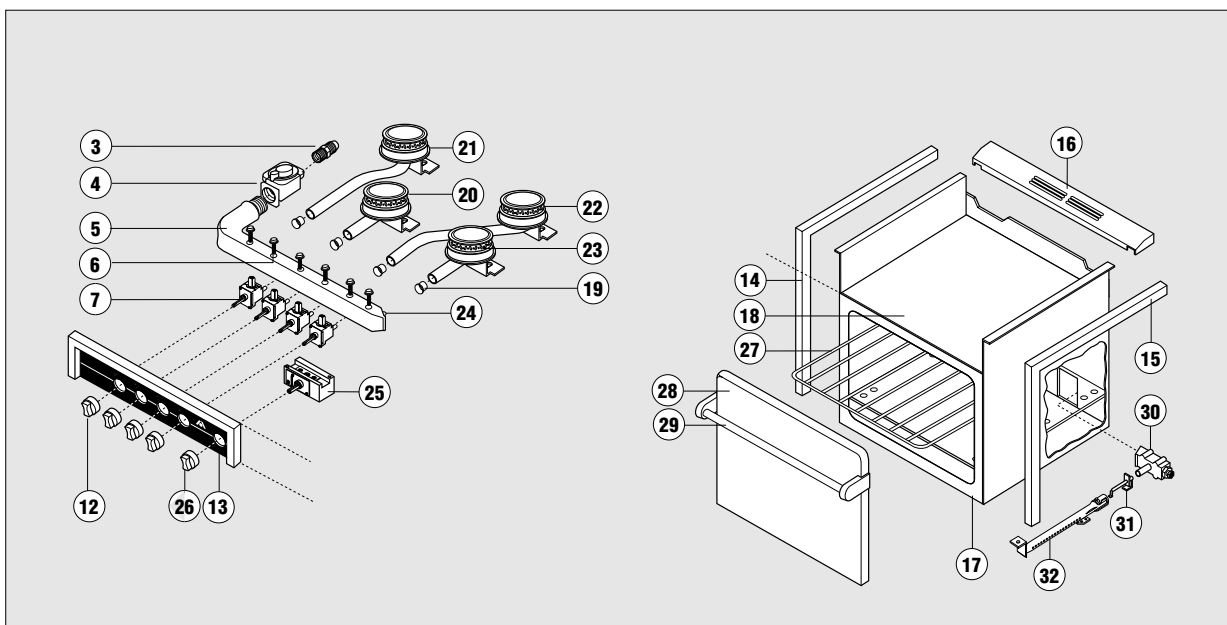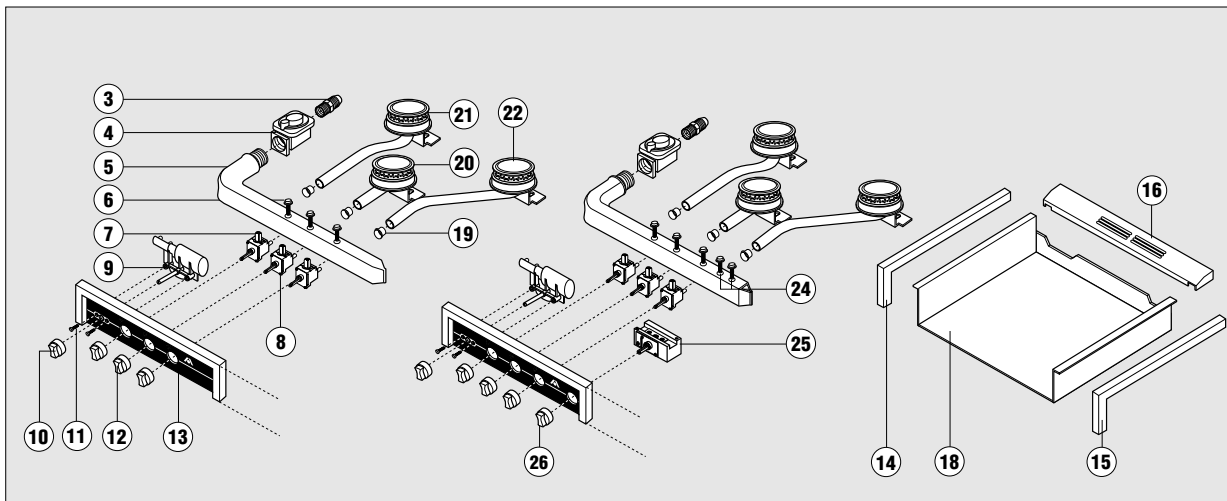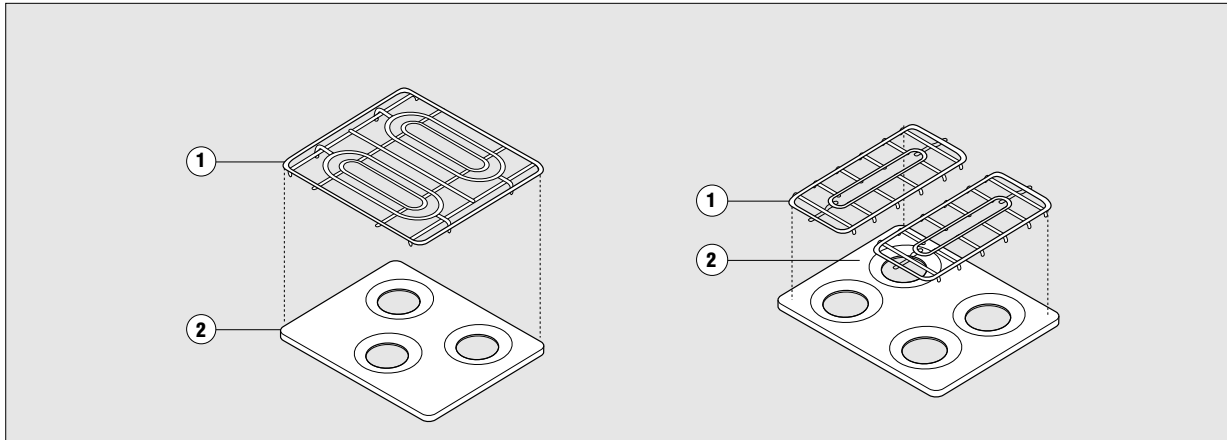

WEDGEWOOD - Oven & Slide-In Cooktop Part Reference

ITEM	C-37	C-38	R-1737	R-1738	R-1746	R-2137	R-2138	R-2146	DESCRIPTION
1	56271	56271	56271		53007 (2)		56271	53007 (2)	Grate (1-piece)
2	53582	53582	53582	53582		53582	53582		*Range, Top (2 hole) ALMOND
2	53583	53583	53583	53583			53583		*Range, Top (2 hole) BLACK
2	53584	53584	53584	53584	53584	53584	53584		*Range, Top (2 hole) WHITE
3	52294	52294	52294	52294	52294	52294	52294	52294	Fitting, Brass
4	51062	51062	51062	51062	51062	51062	51062	51062	Pressure Regulator
5	56072	56072	56160	56160		56160			3-Burner Manifold
6	56088	56088	56088	56088	56091	56088	56088	56091	Valve thru Bolt
	53200	53200	53200	53200		53200	53200		Valve, Burner-MINI 6500 BTU (2)
8	53201	53201	53201	53201		53201	53201		Valve, Burner-MINI 9000 BTU (1)
9	56096	56096	56096	56096		56096	56096		Piezo Igniter
10	51344	51344	51344	51344		51344	51344		Piezo Knob
11	51337	51337	51337	51337		51337	51337		#10 x 3/8" Screw (2)
12	56148	56148	56148	56148	51056 (2)	56148	56148	51056 (2)	Knob, burner
N/S	56097	56097	56097	56097		56097	56097		Wire Assembly (3)
13	56106	56106	56108	56108	56115	56108	56108	56115	Control Panel Assembly Matchlit
	56105	56105	56107	56107	56115	56107	56107	56115	Control Panel Assy w/ piezo
14	53019	53019	53021	53021	53021	53023	53023	53023	Trim, left hand top & side (blk)
15	53020	53020	53022	53022	53022	53024	53024	53024	Trim, right hand top & side (blk)
16	53525	53525	53525	53525	53525	53525	53525	53525	Trim, vent (black)
17			53526	53526	53526	53526	53526	53526	Trim, bottom (black)
18	51685	51685	51684	51684	51684	51684	51684	51684	Burner Box
19	53011	53011	53011	53011	53011	53011	53011	53011	Burner Bushing
20	56071	56071	56071	56071		56071	56071		Burner, ctr (hi output) Matchlit
	56068	56068	56068	56068		56068	56068		Burner, ctr (hi output) w/Electrode
					56257			56257	Burner, left front
21	56069	56069	56069	56069	56259	56069	56069	56259	Burner, left rear Matchlit
	56066	56066	56066	56066		56066	56066		Burner, left rear w/ electrode
22	56070	56070	56070	56070	56260	56070	56070	56260	Burner, right rear Matchlit
	56067	56067	56067	56067		56067	56067		Burner, right rear w/ electrode
23					56258			56258	Burner, right front
24			52120	56125	56125	52120	56125	56125	Screw, Thermostat (2)
25			NA	6114		NA	56114		Thermostat, oven control
26			53001	56171		53001	56171		Knob, oven thermostat
27			51069	51069	51069	51069	51069	51069	Oven rack
						NO LONGER AVAILABLE			Door assembly
						NO LONGER AVAILABLE			Enamel door liner w/window
						NO LONGER AVAILABLE			Enamel door liner
						NO LONGER AVAILABLE			Solid door panel
N/S			53425	53425	53425	53426	53426	53426	Insert, black glass
						NO LONGER AVAILABLE			Insert, black glass w/wndow
N/S			51421	51421	51421	51421	51421	51421	Window, inner assembly
29			51112	51112	51112	51112	51112	51112	Oven Door Handle
30				56120	56120		56120	56120	Safety Valve
31			51065	56121	56121	51065	56121	56121	Pilot Assembly
			51063			51063			Pilot Assembly-MSC valve
32			52018	56123	56123	52018	56123	56123	Burner, oven
N/S			51060	51060	51060	51061	51061	51061	KIT - Door Seal
N/S		51071	51071	51071	51071	51071	51071	51071	KIT-Designer Acc.
N/S			51067	51068	51067	51068	51068	51068	KIT - Gas Tube Kit
N/S	56150	56150	56150	56150	50005	56150	56150	50005	Grate Clip (2)
N/S	53008	53008	53008	53008	53008	53008	53008	53008	Grate Boots
N/S	51129		51128	51127		51128	51127		◆Knob Kits

*When replacing top you MUST replace grate

◆When replacing Burner Knobs use Knob Kit

Wedgewood - Range & Cooktops
PART REFERENCE
JANUARY 2006

Jedgewood - Range & Cooktops												
PART REFERENCE												
JANUARY 2006		R-1730	R-1735	R-1736	R-2136	R-2140	R-2145	C-30	C-35	C-36	C-40	C-45
Grates												
51007	Tension	X				X		X			X	
53006	Top, single		X						X			
53007	Designer, Dual		X			X	X		X		X	X
53050	Top (2)	No longer available (use 56271)										
56271	Hi BTU one piece (1) 2 hole			X	X					X		
Flash Tubes												
51089	Top Lighter Kit	No longer available										
	includes center cluster & gas supply tube											
51216	Flash Tube (long) Piezo	X	X			X	X	X	X		X	X
51245	Flash Tube			X	X					X		
51088	Top Lighter Kit	No longer available										
51089	Top Lighter Kit	No longer available										
Burner												
51235	Burner, RIGHT REAR	No longer available										
51243	Burner, RIGHT REAR	No longer available										
53070	Burner, RIGHT REAR	No longer available										
51233	Burner, RIGHT FRONT	No longer available										
51241	Burner, RIGHT FRONT	No longer available										
51233	Burner, CENTER FRONT	No longer available										
51234	Burner, LEFT REAR	No longer available										
51242	Burner, LEFT REAR	No longer available										
53068	Burner, LEFT REAR	No longer available										
51232	Burner, LEFT FRONT	No longer available										
51240	Burner, LEFT FRONT	No longer available										
51244	Burner, CENTER FRONT	No longer available										
53069	Burner, CENTER (high output)			X	X							
52018	Burner, OVEN	X	X	X	X	X	X					
Air Shutter												
51208	Air Shutter			X	X		X	X	X	X	X	X
Extreme Pressure Regulator												
51062	Extreme Pressure Regulator Kit	X	X	X	X	X	X		X	X		X
X												
52154	Extreme Pressure Regulator	No longer available (use 51062)										
Manifold - Robertshaw												
52125	3 burner manifold	No longer available										
52126	3 burner manifold, silver square R.S.	No longer available										
53049	3 burner manifold, silver square R.S.	No longer available										
52284	4 burner manifold, black square R.S.	No longer available										
Burner Valves												
51096	valve	No longer available										
52123	valve	No longer available										
Supply Valves												
51066	Top Pilot Valve Kit		X				X		X		X	X
52282	Top Lighter	No longer available (use 51066)										
53014	Rear Valve			X	X			X				
53047	High Output Valve			X	X			X				

Wedgewood - Range & Cooktops
PART REFERENCE
JANUARY 2006

	R-1730	R-1735	R-1736	R-2136	R-2140	R-2145	C-30	C-35	C-36	C-40	C-45
Safety Valve											
51063 Safety Valve Kit	No longer available										
51177 Safety Valve	No longer available										
High Output Spark Igniter Assembly											
53078 High Output Spark Igniter Assembly	No longer available										
Piezo											
52279 Piezo Push Button		X	X	X		X	X	X		X	X
Thermostat											
51095 Oven control (fits black square manifold must also order 51059 knob)	No longer available										
52122 Oven control (fits grey manifold)	No longer available										
Trim											
53021 Left Hand, top & side - black	No longer available										
53023 Left Hand, top & side - black	No longer available										
53523 Left Hand, top & side - black	No longer available										
53022 Right Hand, top & side - black	No longer available										
53024 Right Hand, top & side - black	No longer available										
53524 Right Hand, top & side	No longer available										
53025 Vent, black	X	X		X	X	X					
53525 Vent, black			X								
53526 Bottom, black	X	X	X	X	X	X					
53668 Bottom	No longer available										
Manifold Cover											
53072 Manifold Cover, black	No longer available										
53553 Manifold Cover, black	No longer available										
53556 Manifold Cover, black	No longer available										
Burner Box											
51684 Burner Box	X	X	X	X	X	X					
51685 Burner Box									X	X	X
Oven Rack											
51069 Oven Rack	X	X	X	X	X	X					
Shelf											
51657 Oven Bottom	No longer available										
Pilot Assembly											
51065 Oven	X	X	X	X	X	X					
52242 Oven	While Supply lasts (use 51065)										
Knobs											
51056 Burner - package of 2	X	X	X	X	X	X		X	X	X	X
51057 Thermostat Knob	X	X	X	X	X	X					
Kits											
51076 3-Burner Igniter Kit	No longer available										
51077 4-Burner Igniter Kit	No longer available										
51067 Gas Tube Kit - 17"	X	X									
51068 Gas Tube Kit - 21"					X	X					
Grate Boots & Clips											
53160 Grate Boots & Clips			X	X					X		

Wedgewood - Range & Cooktops

PART REFERENCE

JANUARY 2006

Door & Door Parts


	R-1730	R-1735	R-1736	R-2136	R-2140	R-2145	C-30	C-35	C-36	C-40	C-45
XXXXX Door Assembly	No longer available										
XXXXX Door Assembly, black glass	No longer available										
XXXXX Handle, black glass doors	No longer available										
XXXXX Solid door panel	No longer available										
51112 Handle, solid doors	X	X	X	X	X	X					
53087 Handle, black glass doors	No longer available										
53605 Enamel door liner w/window	No longer available										
53611 Enamel door liner w/window	No longer available										
53612 Enamel door liner	No longer available										
53655 Solid door handle	No longer available										
53663 Solid door handle	No longer available										
53425 Insert, black glass	X	X	X								
53426 Insert, black glass				X	X	X					
53445 Insert black glass w/window	No longer available										
53446 Insert black glass w/window	No longer available										
51421 Window, inner assembly			X	X	X	X					
51060 Door seal, sides	X	X	X								
51061 Door seal, sides				X	X	X					

Range Tops


*53582 Top - ALMOND	No longer available										
*53583 Top - BLACK 2 hole	X		X	X							
*53584 Top - WHITE 2 hole	X		X	X							

* When replacing top you must also replace grate.








DV 20

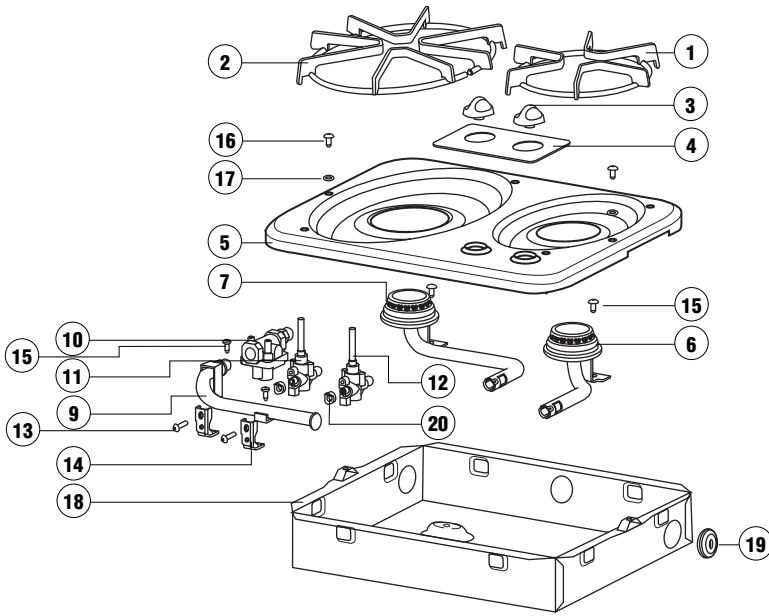


DV 30

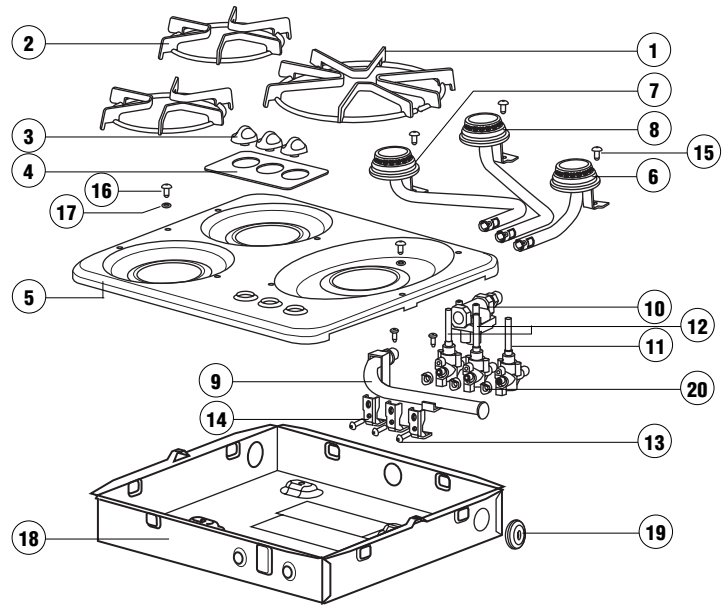


ITEM	DESCRIPTION	DV20	DV30
1	Round Grate	56378	56378 (1)
2	Oval Grate	56379	56379
3	Burner Knob	56380 (2)	56380 (3)
4	Label	56388	56491
5	Top - WHITE	56376	56375
	Top - BLACK	56496	56474
	Top - STAINLESS STEEL	57099	57102
6	Right Burner	56385	56483
7	Left Front Burner	56384	56482
8	Left Rear Burner	NA	56481
9	Manifold Pipe	56383	56478
10	Regulator	51062	51062
11	Valve 7200 Btu/h	56468	56468
12	Valve 5200 Btu/h	56469	56469 (2)
13	Screw-Valve	56480 (2)	56480 (3)
14	Valve Bracket	56479 (2)	56479 (3)
15	Screw-Burner	51325 (4)	51325 (5)
16	Screw-Top	56377 (2)	56377 (2)
17	Nylon Washer	52434 (2)	52434 (2)
18	Burner Box	56498	56476
19	Inlet Pipe Grommet	92610	92610
20	Gasket, Valve	56366 (2)	56366 (3)

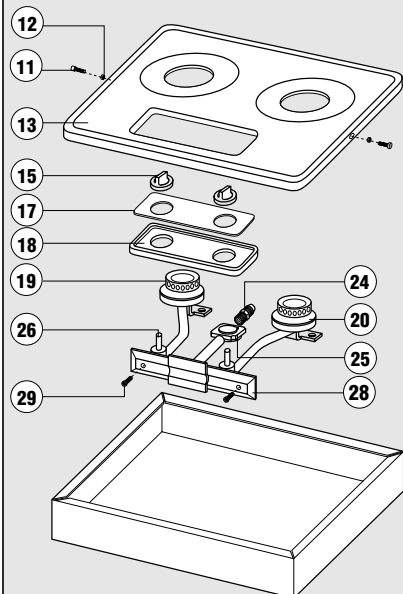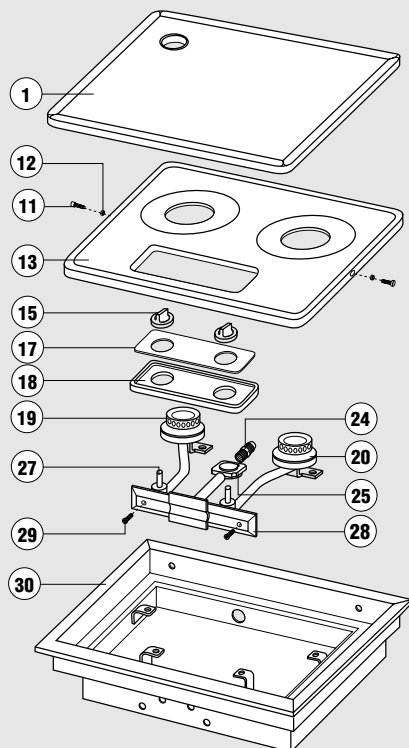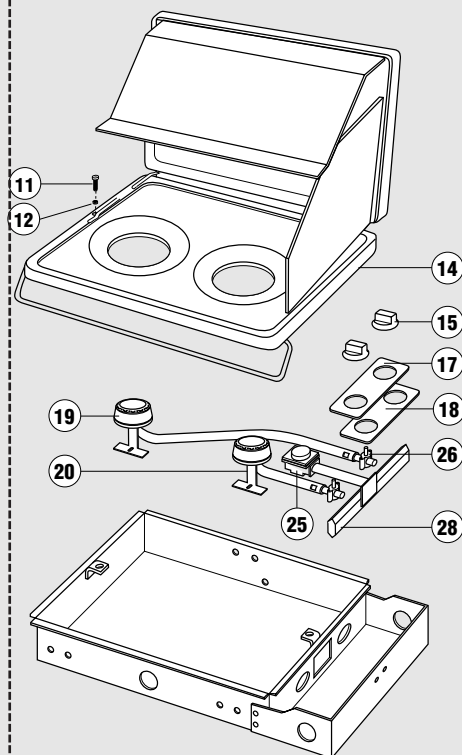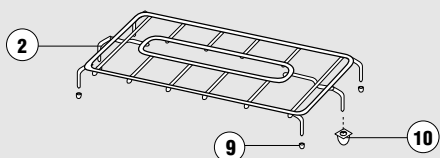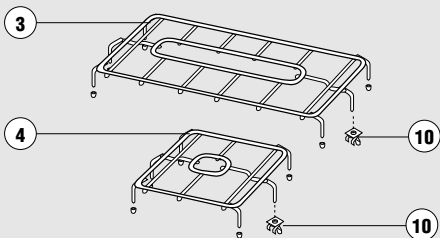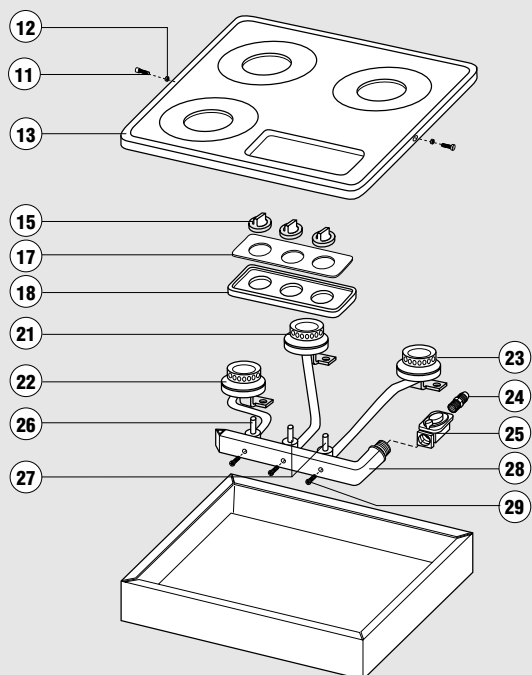D-21 / D-26

D-26 SG

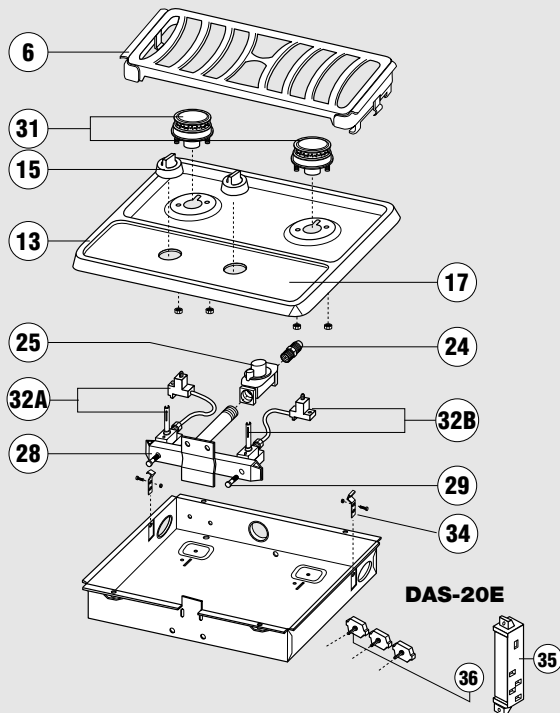D-26 SV

D-21 / D-26 D-26 SV D-26SG

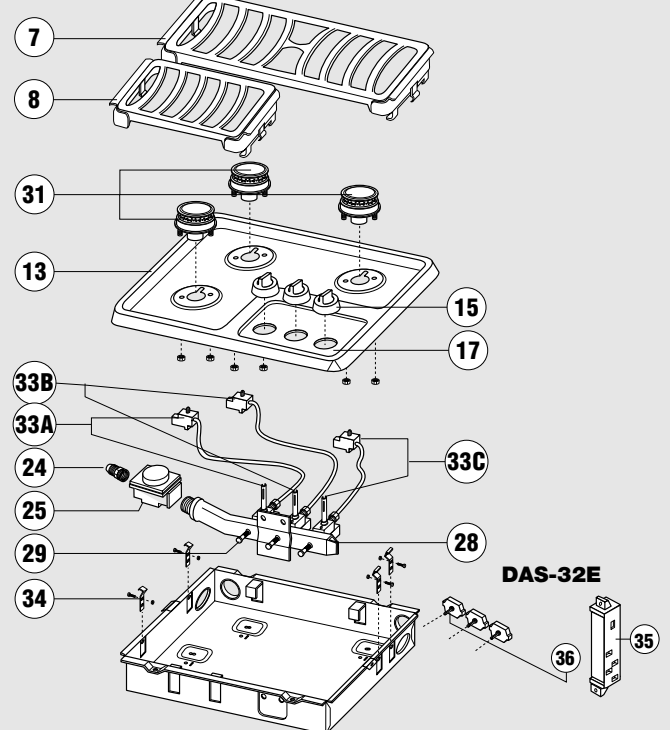D-36

D-21 / D-31

D-31 / D-36


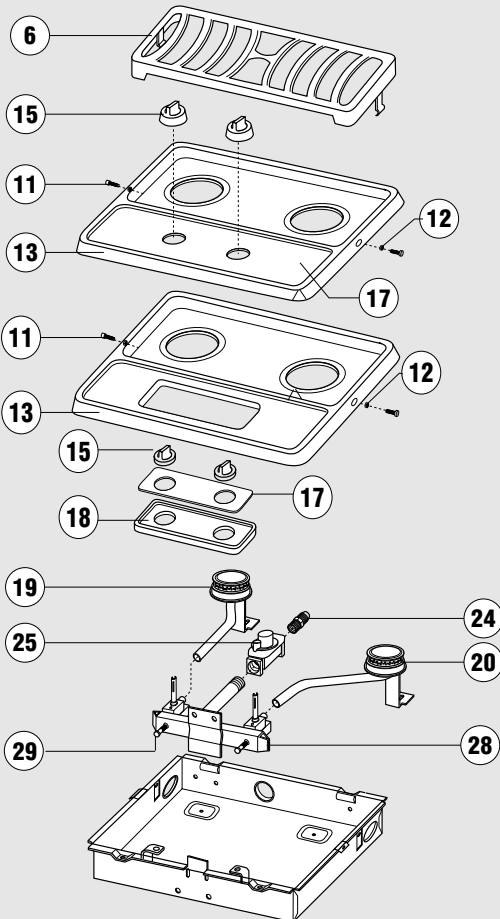
DAS-20




DAS-30 / DAS 32E



DA-20



DA-21

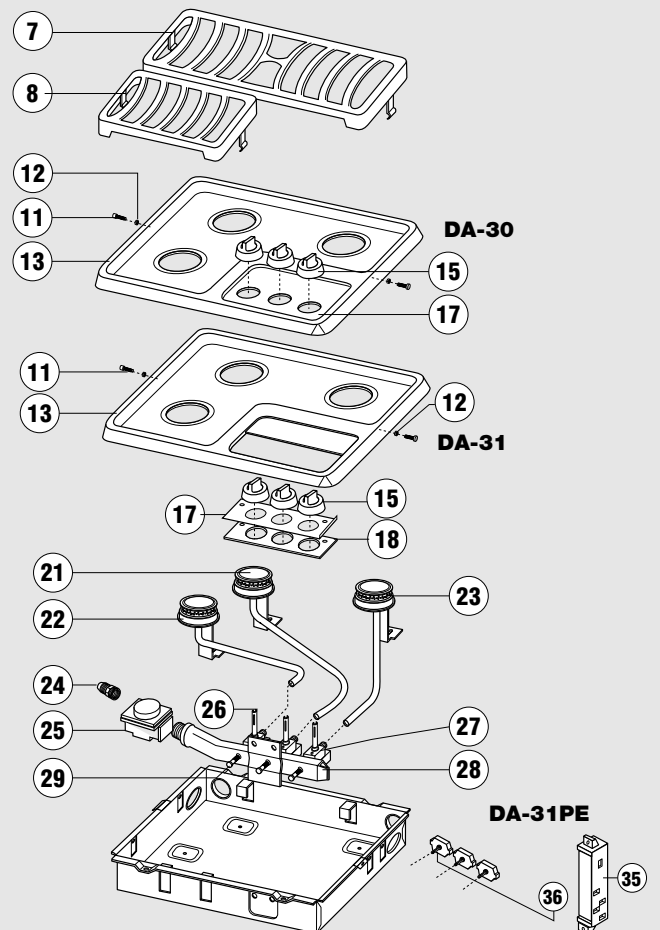

DA-31PE

Drop-in Cooktops
PART REFERENCE
JANUARY 2006

Burner

	D-21 / D-26	D-26SV	D-26SG	D-31 / D-36	DA-20	DA-21	DA-30	DA-31	DA-31PE	DAS-20 / DAS-20E	DAS-30	DAS-32E
56073 Burner, LEFT	X		X									
56075 Burner, LEFT		X										
56212 Burner, LEFT					X	X						
56302 Burner, LEFT (VALVE/TUBE ASSEMBLY)										X		
56074 Burner, RIGHT	X		X									
56076 Burner, RIGHT		X										
56213 Burner, RIGHT					X	X						
56303 Burner, RIGHT (VALVE/TUBE ASSEMBLY)										X		
56083 Burner, LEFT REAR				X								
56215 Burner, LEFT REAR							X	X				
56234 Burner, LEFT REAR									X			
56304 Burner, LEFT REAR (VALVE/TUBE ASSEMBLY)										X		
56214 Burner, LEFT FRONT							X	X				
56082 Burner, LEFT FRONT				X								
56235 Burner, LEFT FRONT									X			
56305 Burner, LEFT FRONT (VALVE/TUBE ASSEMBLY)										X		
56084 Burner, RIGHT REAR				X								
56216 Burner, RIGHT REAR							X	X				
56233 Burner, RIGHT REAR									X			
56306 Burner, RIGHT REAR (VALVE/TUBE ASSEMBLY)										X		
56307 Burner, SEALED (PLAIN)										X	X	X
56208 Burner, SEALED (BLACK)										X	X	X
56207 Burner, ELECTRONIC IGNITION (PLAIN)										X	X	X
56325 Burner, ELECTRONIC IGNITION (BLACK)										X	X	X

Control Panel Label

52539 Black label	X											
52437 Black label		X										
51454 Black label			X									
52540 Black label				X								
56346 Black label					X							
57700 Black label						X						
56347 Black label							X					
57051 Black label (Before S.N. B0220)								X				
53126 Black label (After S.N. B0200)								X				
57050 Black label (Before S.N. B0200)									X			
53126 Black label (After S.N. B0200)									X			
56350 Black label 56348 White label										X		
56351 Black label 56349 White label											X	
57052 Black label												X

Cover

56204 Cover			X									
56205 Frame			X									
51443 Cooktop & Cover Asbly			X									

Electronic Ignition

56162 12V Ignition Module									X	X		X
56184 Ground Lead									X			X
56165 Electrode Lead									X	X		X

Fitting, Brass

52294 Fitting, Brass	X	X	X	X	X	X	X	X	X	X	X	X
-----------------------------	---	---	---	---	---	---	---	---	---	---	---	---

Drop-in Cooktops
PART REFERENCE
JANUARY 2006

Grates

	D-21 / D-26	D-26SV	D-26SG	D-31 / D-36	DA-20	DA-21	DA-30	DA-31	DA-31PE	DAS-20 / DAS-20E	DAS-30	DAS-32E
51007 Medallion Grate	(2)			(3)								
53304 Designer Grate	X	X	X									
53303 Designer Grate, Rear				X								
53302 Designer Grate, Front				X								
53436 Stamped Steel Grate					X	X						
53437 Stamped Steel Grate, Rear OPEN							X	X	X			
53438 Stamped Steel Grate, Front OPEN							X	X	X			
53439 Stamped Steel Grate										X		
53441 Stamped Steel Grate, Rear SEALED											X	X
53442 Stamped Steel Grate, Front SEALED											X	X

Grate Boots & Clips

53301 Grate Clips	(2)	(2)	(2)	(4)								
51410 Grate Top Clip N/S									(4)	(2)	(4)	(4)
53008 Grate Boot	(4)	(4)	(4)	(8)								

Knobs

53000 Burner Knob	(2)	(2)	(2)	(3)								
56129 Burner Knob					(2)	(2)	(3)	(3)	(3)	(2)	(3)	(3)

Manifold

52523 Manifold Cover	X		X					X	X			
52524 Manifold Cover				X								
52516 Manifold Cover						X						
56079 Manifold Pipe	X	X	X		X	X				X		
50160 Manifold Pipe							X	X	X		X	X

Misc.

52016 Thumb screw					X	X	X	X			X	
52537 Thumb screw	X	X	X	X								
52434 Nylon Washer (2)	X	X	X	X	X	X	X	X			X	

Pressure Regulator

51062 Pressure Regulator	X	X	X	X	X	X	X	X	X	X	X	X
--------------------------	---	---	---	---	---	---	---	---	---	---	---	---

Top, Cook

Almond top	ORDER BY COLOR											
Black top	ORDER BY COLOR											
White top	ORDER BY COLOR											

Valve

53124 6500 Linear Valve after SN B020									(1)			
53114 5200 Linear Valve after SN B020									(2)			
56090 Valve, Burner-6500 BTU	(2)	(2)		(1)		(2)		(1)	(1)			
56300 Valve, Burner-6500 BTU			(2)		(2)		(1)					
56089 Valve, Burner-5200 BTU			(2)	(2)				(2)	(2)			
56301 Valve, Burner-5200 BTU							(2)					
56145 Valve Ignition Switch									(3)	(2)		
57055 Valve Ignition Switch												(3)

Valve thru Bolt

56091 Valve thru Bolt	(2)	(2)	(2)	(3)	(2)	(2)	(3)	(3)	(3)	(2)	(3)	(3)
-----------------------	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

Wire Harness

56164 Wire Harness									X	X		X
--------------------	--	--	--	--	--	--	--	--	---	---	--	---

Valve Tube Assembly

56302 Left										X		
56303 Right										X		
56305 Left front											X	
56304 Left rear											X	
56306 Right rear											X	
56309 Left front												X
56308 Left rear												X
56310 Right rear												X

NOTES

THIS PAGE INTENTIONALLY LEFT BLANK